

Congratulations on your purchase of the Sony Ericsson W760i. A slim and stylish phone with everything you need to enjoy your music wherever you go.

For additional phone content, go to [www.sonyericsson.com/fun](http://www.sonyericsson.com/fun). Register now to get a suite of tools, free online storage, special offers, news and competitions at [www.sonyericsson.com/myphone](http://www.sonyericsson.com/myphone).

For product support, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

# Accessories – More for your phone

## Stereo Bluetooth™ Headset

HBH-DS205

Enjoy wireless music without missing a call.



## Active Speaker MAS-100

Share your music while protecting your phone.



## Portable Bluetooth™ Speaker

MBS-100

A wireless sphere of music.



These accessories can be purchased separately but may not be available in every market. To view the full range go to [www.sonyericsson.com/accessories](http://www.sonyericsson.com/accessories).

**This is the Internet version of the User's guide. © Print only for private use.**

# Contents

## Getting started ..... 5

Assembly .....	5
Turning on the phone .....	6
Help .....	7
Charging the battery .....	8
Phone overview .....	9
Menu overview .....	11
Navigation .....	13
Phone language .....	15
Entering text .....	15

## Walkman® and music ..... 16

Transferring content to and from a computer .....	16
Stereo portable handsfree .....	17
Walkman® player .....	17
PlayNow™ .....	20
TrackID™ .....	20
Online music and video clips .....	20

## Calling ..... 21

Making and receiving calls .....	21
Contacts .....	22
Call list .....	25
Speed dial .....	25

Voicemail .....	26
Voice control .....	26
More than one call .....	27
Restricted dialling .....	29
Call time and cost .....	29
Showing or hiding your phone number .....	29

## Messaging ..... 30

Text messages .....	30
Picture messages .....	31
Message options .....	32
Voice messages .....	32
Email .....	32
My friends .....	34
Area and cell information .....	35

## Imaging ..... 36

Camera and video recorder .....	36
Using the camera .....	36
Camera icons and settings .....	37
Transferring pictures .....	37
Pictures .....	38
PhotoDJ™ and VideoDJ™ .....	39

<b>Internet .....</b>	<b>40</b>	<b>More features .....</b>	<b>55</b>
Internet security and certificates .....	41	Flight mode .....	55
Web feeds .....	41	File manager .....	55
<b>GPS .....</b>	<b>42</b>	Alarms .....	56
Using the GPS .....	42	Calendar .....	57
Google Maps™ for mobile .....	43	Notes .....	58
Driving directions .....	43	Tasks .....	58
More GPS features .....	43	Profiles .....	58
Tracker .....	44	Time and date .....	59
<b>Entertainment .....</b>	<b>46</b>	Theme .....	59
Video player .....	46	Main menu layout .....	59
Radio .....	46	Locks .....	59
Ringtones and melodies .....	46	<b>Troubleshooting .....</b>	<b>61</b>
MusicDJ™ .....	47	Common questions .....	61
Sound recorder .....	47	Error messages .....	63
Games .....	47	<b>Important information .....</b>	<b>65</b>
Applications .....	47	Guidelines for Safe and Efficient Use .....	67
<b>Connectivity .....</b>	<b>48</b>	End User Licence Agreement .....	70
Settings .....	48	Limited Warranty .....	71
Phone name .....	48	FCC Statement .....	73
Bluetooth™ wireless technology .....	49	Declaration of Conformity for W760i .....	73
Using the USB cable .....	50	<b>Index .....</b>	<b>74</b>
Synchronising .....	51		
Update service .....	54		

## Sony Ericsson W760i

UMTS HSDPA 850/1900/2100 GSM EDGE  
850/900/1800/1900

This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programmes and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.

All rights reserved.

©Sony Ericsson Mobile Communications AB, 2007

Publication number: 1204-9255.1

Please note:

Some of the services in this User guide are not supported by all networks. *This also applies to the GSM International Emergency Number 112.*

Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

Please read the *Guidelines for safe and efficient use* and the *Limited warranty* chapters before you use your phone.

Your phone has the capability to download, store and forward additional content, e.g., ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your phone. Prior to your use of any additional content, please verify that your intended use is properly licenced or is otherwise authorised. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

Smart-Fit Rendering is a trademark or a registered trademark of ACCESS Co., Ltd.

Bluetooth is a trademark or a registered trademark of Bluetooth SIG Inc. and any use of such mark by Sony Ericsson is under licence.

The Liquid Identity logo, SensMe, PlayNow, MusicDJ, PhotoDJ, TrackID and VideoDJ are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB.

TrackID™ is powered by Gracenote Mobile MusicID™. Gracenote and Gracenote Mobile MusicID are trademarks or registered trademarks of Gracenote, Inc.

Lotus Notes is a trademark or a registered trademark of International Business Machines Corporation.

Sony, Memory Stick Micro™, M2™ and WALKMAN are trademarks or registered trademarks of Sony Corporation.

Google™ and Google Maps™ are trademarks or registered trademarks of Google, Inc.

Wayfinder and Wayfinder Navigator are trademarks or registered trademarks of Wayfinder Systems AB. SyncML is a trademark or registered trademark of Open Mobile Alliance LTD.

Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson.

Adobe Photoshop Album Starter Edition is a trademark or registered trademark of Adobe Systems Incorporated in the United States and/or other countries.

Microsoft, ActiveSync, Windows, Outlook, and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

T9™ Text Input is a trademark or a registered trademark of Tegic Communications. T9™ Text Input is licenced under one or more of the following: U.S. Pat. Nos. 5,818,437, 5,953,541, 5,187,480, 5,945,928, and 6,011,554; Canadian Pat.

No. 1,331,057, United Kingdom Pat. No. 2238414B; Hong Kong Standard Pat. No. HK0940329; Republic of Singapore Pat. No. 51383; Euro.Pat. No. 0 842 463(96927260.8) DE/DK, FI, FR, IT, NL, PT, ES, SE, GB; and additional patents are pending worldwide. Java and all Java based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. End-user licence agreement for Sun™ Java™ J2ME™. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicenced, in whole or in part.

Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licences to export, re-export, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders.

Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable.

Other product and company names mentioned herein may be the trademarks of their respective owners.


Any rights not expressly granted herein are reserved. All illustrations are for illustration only and may not accurately depict the actual phone.


## Instruction symbols

These symbols may appear in the User guide.

 Note

 Tip

 Warning

 A service or function is network- or subscription-dependent. Contact your network operator for details.

> Use a selection or navigation key to scroll and select. See *Navigation* on page 13.

# Getting started

## Assembly


Before you start using your phone, you need to insert a SIM card and the battery.

### *To insert the SIM card*



- 1 Remove the battery cover.
- 2 Slide the SIM card into its holder with the gold-coloured contacts facing down.

### *To insert the battery*

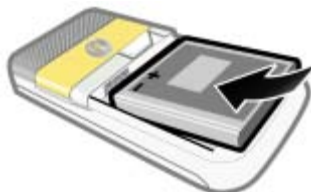

- 1 Insert the battery with the label side up and the connectors facing each other.
- 2 Slide the battery cover into place.

### *To attach the battery cover*



- 1 Align the tabs on the back of the battery cover with the phone slots.
- 2 Snap the cover into place on both sides.

### *To remove the battery cover*



- Use the slots to detach cover.

## To remove the SIM card




- 1 Remove the battery cover.
- 2 Remove the SIM card from its holder.



## Turning on the phone


### To turn on the phone



- 1 Press and hold down .
- 2 Enter your SIM card PIN, if requested and select **OK**.


- 3 Select a language.
- 4 Select **Yes** to use the setup wizard while settings are downloaded.

 If you want to correct a mistake when you enter your PIN, press .

 Before turning the phone off, you must return to standby.

### SIM card

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

 You can save contacts on the SIM card before you remove it from your phone. See *To copy names and numbers to the SIM card* on page 23.



## PIN

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as \*, unless it starts with emergency number digits, e.g., 112 or 911. You can see and call an emergency number without entering a PIN.

! If you enter the wrong PIN three times in a row, the SIM card is blocked. See *SIM card lock* on page 59.



## Start-up screen

The start-up screen appears when you turn your phone on. See *Using pictures* on page 39.

## Standby

After you have turned your phone on and entered your PIN, the name of the network operator appears. This view is called standby.

## Help

In addition to this User guide, Getting started guides and more information are available at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Help in your phone

Help and information are available in your phone. See *Navigation* on page 13.

## To view tips and tricks

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Setup wizard**.
- 2 Select **Tips and tricks**.

### *To view information about functions*

- Scroll to a function and select [Info](#), if available. In some cases, [Info](#) appears under [Options](#).

### *To view the phone demonstration*

- From standby select [Menu](#) > [Entertainment](#) > [Demo tour](#).


### *To view status information*

- From standby press the volume key up.

## **Charging the battery**

The phone battery is partly charged when you buy it.

### *To charge the battery*

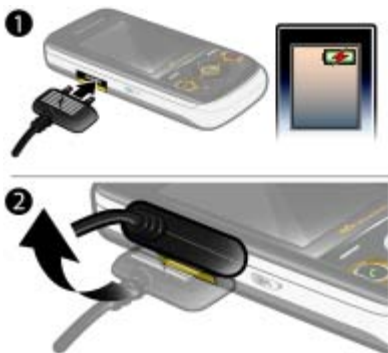

- 1 Connect the charger to the phone. It takes approximately 2.5 hours to fully charge the battery. Press a key to view the screen.
- 2 Remove the charger by tilting the plug upwards.

💡 *You can use your phone while it is charging. You can charge the battery at any time and for more or less than 2.5 hours. You can interrupt the charging without damaging the battery.*

## Phone overview

- 1 Ear speaker
- 2 A/B gaming keys
- 3 Screen
- 4 Selection keys
- 5 Call key
- 6 Activity menu key
- 7 Navigation key
- 8 Volume keys
- 9 Battery cover slot
- 10 End key, on/off key
- 11 C key (Clear)



- 12 Memory card slot
- 13 Charging indicator
- 14 Connector for charger, handsfree and USB cable
- 15 GPS antenna
- 16 Walkman® key
- 17 Strap holder



## Menu overview



PlayNow™\*



Internet\*



Entertainment

Online services\*  
Radio  
TrackID™  
Games  
VideoDJ™  
PhotoDJ™  
MusicDJ™  
Remote control  
Record sound  
Demo tour



Camera



Messaging

Write new  
Inbox  
Email  
Drafts  
Outbox  
Sent messages  
Saved messages  
My friends\*  
Call voicemail  
Templates  
Manage messages  
Settings



Media

Photo  
Music  
Video  
TV  
Games  
Web feeds  
Settings



Location services

Google Maps  
Navigation  
Tracker  
My favourites  
Status info  
Log  
Settings



Contacts

Myself  
New contact



WALKMAN



## Calls\*\*



All



Answered



Dialled



Missed



## Organizer

File manager\*\*  
 Alarms  
 Applications  
 Calendar  
 Tasks  
 Notes  
 Synchronization  
 Timer  
 Stopwatch  
 Calculator  
 Code memo



## Settings\*\*



General  
 Profiles  
 Time & date  
 Language  
 Update service  
 Voice control  
 New events  
 Shortcuts  
 Flight mode  
 Security  
 Setup wizard  
 Accessibility\*  
 Phone status  
 Master reset



Sounds & alerts  
 Ring volume  
 Ringtone  
 Silent mode  
 Increasing ring  
 Vibrating alert  
 Message alert  
 Key sound



Display  
 Wallpaper  
 Main menu layout  
 Theme  
 Startup screen  
 Screen saver  
 Clock size  
 Brightness  
 Edit line names\*



Calls  
 Speed dial  
 Smart search  
 Divert calls  
 Switch to line 2\*  
 Manage calls  
 Time & cost\*  
 Show/hide my no.  
 Handsfree  
 Open to answer  
 Close to end call



Connectivity  
 Bluetooth  
 USB  
 Phone name  
 Network sharing  
 Synchronization  
 Device management  
 Mobile networks  
 Data communication\*  
 Internet settings  
 Streaming settings  
 Message settings\*  
 SIP settings  
 Accessories

\* Some menus are operator-, network- and subscription-dependent.

\*\* You can use the navigation key to scroll between tabs in submenus. For more information, see Navigation on page 13.

## Navigation

The main menus are shown as icons. Some submenus include tabs.

### *To navigate the phone menus*



- 1 From standby select **Menu**.
- 2 Use the navigation key to move through the menus.

### *To select actions on the screen*

- Press the left or right selection key, or the centre navigation key.

### *To view options for an item*

- Select **Options** to, e.g., edit.

### *To scroll between the tabs*

- Scroll to a tab by pressing the navigation key left or right.

### *To return to standby*

- Press .


### *To end a function*

- Press .

### *To navigate your media*

- 1 From standby select **Menu** > **Media**.
- 2 Scroll to a menu item and press the navigation key right.
- 3 To go back, press the navigation key left.

### *To delete items*

- Press  to delete items such as numbers, letters, pictures and sounds.

### *To send items*

- 1 Scroll to an item such as a contact, a picture or a sound.
- 2 Select **Options** > **Send** to send items such as contacts, pictures and sounds.
- 3 Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

### **Shortcuts**

You can use keypad shortcuts to go directly to a menu. Menu numbering starts from the top left icon and moves across and then down row by row.

### *To go directly to a main menu*

- From standby select **Menu** and press **(1)** – **(9)**, **(\*)a/A**, **(0)+** or **(#)☎**.

### *To use navigation key shortcuts*

- From standby press **(↑)**, **(↓)**, **(←)** or **(→)** to go directly to a function.

- ! *The **Main menu layout** must be set to **Grid**. See *To change the main menu layout* on page 59.*

### *To edit a navigation key shortcut*

- From standby select **Menu** > **Settings** > the **General** tab > **Shortcuts**.
- Scroll to an option and select **Edit**.
- Scroll to a menu option and select **Shortc.**

### **Activity menu**

The activity menu gives you quick access to certain functions.

### *To open the activity menu*

- Press **(☰)**.

### **Activity menu tabs**

- New events** – missed calls and new messages.
- Running apps** – applications that are running in the background.
- My shortcuts** – add your favourite functions to access them quickly.
- Internet** – quick access to the Internet.

### **Memory card**

- ! *You may have to purchase a memory card separately.*

Your phone supports Memory Stick Micro™ (M2™) memory card adding more storage space to your phone. It can also be used as a portable memory card with other compatible devices.

You can use the file manager to move files between the memory card and the phone memory. See *To move a file in the file manager* on page 56.


### *To insert a memory card*



- Open the cover and insert the memory card with the gold-coloured contacts facing up.



## To remove a memory card

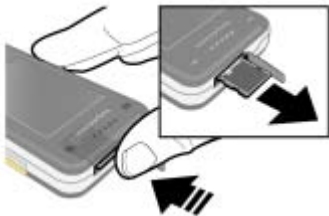

- Open the cover and press the edge of the memory card to release and remove it.

## To view memory card options

- 1 From standby select **Menu** > **Organizer** > **File manager** > the **On memory card** tab.
- 2 Select **Options**.

## Phone language

You can select a language to use in your phone.

## To change the phone language

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Language** > **Phone language**.
- 2 Select an option.

## Entering text

You can use multitap text input or T9™ Text Input **T9** to enter text. The T9 Text Input method uses a built-in dictionary.

## To change text input method

- When you enter text, press and hold down **(\*) a/A**.

## To shift between capitals and lower-case letters

- When you enter text, press **(\*) a/A**.

## To enter numbers

- When you enter text, press and hold down **(0 +)** - **(9)**.

## To enter full stops and commas

- When you enter text, press **(1)**.

## To enter a symbol

- 1 When you enter text, select **Options** > **Add symbol**.
- 2 Scroll to a symbol and select **Insert**.

## To enter text using T9™ Text Input

- 1 From standby select, e.g., **Menu** > **Messaging** > **Write new** > **Text message**.
- 2 If **T9** is not displayed, press and hold down **(\*) a/A** to change to T9 Text Input.

- 3 Press each key only once, even if the letter you want is not the first letter on the key. E.g., to write the word “Jane”, press (5), (2), (6), (3). Write the whole word before looking at the suggestions.
- 4 Use (⬅️) or (➡️) to view suggestions.
- 5 Press (#↵) to accept a suggestion.

### **To enter text using multitap**

- 1 From standby select, e.g., **Menu** > **Messaging** > **Write new** > **Text message**.
- 2 If (T9) is displayed, press and hold down (\*a/A) to change to multitap text input.
- 3 Press (2) – (9) repeatedly until the desired letter appears. E.g., to write the word “Jane”, press (5), (2), (6), (6), (3).
- 4 When a word is written, press (#↵) to add a space.

### **To add words to the built-in dictionary**

- 1 When you enter text using T9 Text Input, select **Options** > **Spell word**.
- 2 Write the word using multitap input and select **Insert**.

## **Walkman® and music**

You can listen to music, audio books and podcasts. Use *Sony Ericsson Media Manager* to transfer content to your phone. For more information go to the Getting started section at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

- ! *Sony Ericsson Media Manager software is available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

## **Transferring content to and from a computer**

### **Required operating systems**

You need one of these operating systems to use the software included on the CD:

- Microsoft® Windows Vista™ 32 bit or 64 bit versions of: Ultimate, Enterprise, Business, Home Premium, Home Basic)
- Microsoft® Windows XP (Pro or Home), Service Pack 2 or higher

### **To install Media Manager**

- 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
- 2 Select a language and click **OK**.
- 3 Click **Install Sony Ericsson Media Manager** and follow the instructions.

### ***To transfer content using Media Manager***

- 1 Connect the phone to a computer with a USB cable supported by your phone.
- 2 **Computer:** *Start/Programmes/Sony Ericsson/Media Manager.*
- 3 **Phone:** Select **Media transfer**.

! *Do not remove the USB cable from your phone or computer during transfer, as this may corrupt the memory card or the phone memory.*

- 4 **Computer:** Wait until the phone appears in Media Manager.
- 5 Move files between your phone and the computer in Media Manager.

💡 *For details on transferring music, refer to Media Manager Help. Click (?) in the top right corner of the Media Manager window.*

## **Stereo portable handsfree**

### ***To use the handsfree***

- Connect the portable handsfree. Music stops when you receive a call and resumes when the call has ended.

## **Walkman® player**

### ***To play music***

- 1 From standby select **Menu > Media > Music**.
- 2 Scroll to a title and select **Play**.

### ***To stop playing music***

- Press the centre navigation key.

### ***To fast forward and rewind***

- Press and hold down ⏮ or ⏭.

### ***To move between tracks***


- Press ⏮ or ⏭.

### ***To change the volume***

- Press the volume keys up or down.

### **Shake control**


### ***To switch track***

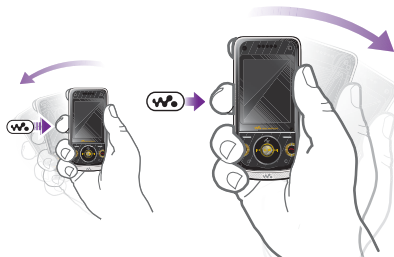

- When you listen to music, press and hold down **w** and move the phone to the right with a flick of your wrist to go to the next track. To go to the previous track, use the same action to the left.


### *To shuffle tracks*



- When you listen to music, press and hold down  and shake your phone.

### *To change the volume*



- When you listen to music, hold the phone out in front of you facing upwards. Press and hold down , and bend your arm upwards towards you to increase the volume. To decrease the volume, repeat the action in the opposite direction.

### **Browsing files**

Music is saved and categorised.

- **Artists** – list music by artist.
- **Albums** – list music by album.
- **Tracks** – list all music tracks.
- **Playlists** – create own lists of tracks.
- **SensMe™** – list tracks by mood. For the SensMe™ function to work, the tracks need to be transferred using Media Manager.
- **Genre** – list music by genre.
- **Year** – list music by year.
- **Audio books** – list audio books you have transferred from your computer.
- **Podcasts** – list all podcasts.

### **Playlists**


You can create playlists to organise music files. Files can be added to more than one playlist.

Deleting a playlist, or a file from a playlist, does not delete the file from the memory, just the reference to the file.

### *To create a playlist*

- 1 From standby select **Menu > Media** and scroll to **Music > Playlists**.
- 2 Scroll to **New playlist** and select **Add**.
- 3 Enter a name and select **OK**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the tracks to the playlist.

## To create a playlist by mood

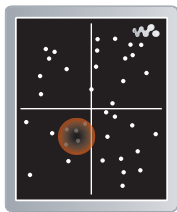

! To create playlists by mood, your music tracks must be transferred to your phone using Media Manager. For information on how to analyze your music, see Media Manager Help.

- 1 From standby select **Menu** > **Media**.
- 2 Scroll to **Music** > **SensMe™** and select **Open**.
- 3 Press the navigation **⬆**, **⬇**, **⬅** or **➡** to preview different tracks.
- 4 Select **Add** > **Create** > **Options** > **Save playlist**.
- 5 Enter a name and select **OK**.

## To add files to a playlist

- 1 From standby select **Menu** > **Media** and scroll to **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to **Add music** and select **Add**.
- 4 For each track you want to add, scroll to the track and select **Mark**.
- 5 Select **Add** to add the tracks to the playlist.

## To remove tracks from a playlist

- 1 From standby select **Menu** > **Media** and scroll to **Music** > **Playlists**.
- 2 Select a playlist.
- 3 Scroll to the track and press **(C)**.

## To view information about a track

- Scroll to a track and select **Options** > **Information**.

## Audio books

You can listen to audio books that you have transferred to your phone from a computer using Media Manager.

! It may take a few minutes before a transferred audio book appears in the list of available audio books.

## To play audio books

- 1 From standby select **Menu** > **Media** > **Music** > **Audio books**.
- 2 Select an audio book.
- 3 Scroll to a chapter and select **Play**.

! Audio books in other formats than M4B or audio books that do not have ID3v2 chapter tags can be found in the **Tracks** folder.



## PlayNow™

You can connect to PlayNow™ to download ringtones, games, music, themes and wallpapers. You can preview or listen to content before you purchase and download it to your phone.



*This service is not available in all countries.*

### Before you use PlayNow™

You must have the required Internet connection settings in your phone. See *Settings* on page 48.

### To use PlayNow™

- 1 From standby select [Menu](#) > [PlayNow™](#).
- 2 Scroll the PlayNow™ Web site and follow the instructions to preview and purchase content.

## TrackID™

TrackID™ is a music recognition service. You can search for song titles, artists and album names.



*For best results, use TrackID™ in a quiet environment.*



*For cost information contact your service provider.*

### To search for song information

- When you hear a song through a loudspeaker, from standby select [Menu](#) > [Entertainment](#) > [TrackID™](#) > [Start](#).
- When the radio is playing select [Options](#) > [TrackID™](#).

## Online music and video clips

You can view video clips and listen to music by streaming them to your phone from the Internet. If settings are not already in your phone, see *Settings* on page 48. For more information, contact your network operator or go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### To select a data account for streaming

- 1 From standby select [Menu](#) > [Settings](#) > the [Connectivity](#) tab > [Streaming settings](#) > [Connect using](#).
- 2 Select the data account to use.
- 3 Select [Save](#).

### To stream music and video clips


- 1 From standby select [Menu](#) > [Internet](#).
- 2 Select [Options](#) > [Go to](#) > [Bookmarks](#).
- 3 Select a link to stream from.


# Calling

## Making and receiving calls

You need to turn on your phone and be within range of a network.

### To make a call



- 1 From standby enter a phone number (with international country code and area code, if applicable).
- 2 Press .

 You can call numbers from your contacts and call list. See *Contacts* on page 22, and *Call list* on page 25. You can also use your voice to make calls. See *Voice control* on page 26.

### To end a call

- Press .

### To make international calls

- 1 From standby press and hold down  until a “+” sign appears.
- 2 Enter the country code, area code (without the first zero) and phone number.
- 3 Press .

### To answer a call

- Press .

### To reject a call

- Press .

### To redial a number

- When **Retry?** appears select **Yes**.

 



*Do not hold your phone to your ear when waiting. When the call connects, your phone gives a loud signal.*

### To change the ear speaker volume during a call

- Press the volume key up or down.

### To mute the microphone during a call

- 1 Press and hold down .
- 2 Press and hold down  again to resume.


### To turn the loudspeaker on during a call

- Select **SpkrOn**.



*Do not hold your phone to your ear when using the loudspeaker. This could damage your hearing.*

### To view previous calls from standby

- Press  to open the call list.

## Networks

Your phone switches automatically between GSM and 3G (UMTS) networks depending on availability. Some network operators allow you to switch networks manually.

### **To switch networks manually**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Mobile networks** > **GSM/3G networks**.
- 2 Select an option.


### **Emergency calls**

Your phone supports international emergency numbers, e.g., 112 and 911. These numbers can normally be used to make emergency calls in any country, with or without the SIM card inserted, if a 3G (UMTS) or GSM network is within range.



- *In some countries, other emergency numbers may also be promoted. Your network operator may therefore have saved additional local emergency numbers on the SIM card.*

### **To make an emergency call**

- From standby enter 112 (the international emergency number) and press .

### **To view your local emergency numbers**

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Special numbers** > **Emergency nos..**

## **Contacts**

You can save names, phone numbers and personal information in **Contacts**. Information can be saved in the phone memory or on the SIM card.

### **Default contacts**

You can choose which contact information is shown as default. If **Phone contacts** is selected as default, your contacts show all the information saved in **Contacts**. If you select **SIM contacts** as default, your contacts show names and numbers saved on the SIM card.

### **To select default contacts**

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Default contacts**.
- 3 Select an option.

### **Phone contacts**

Phone contacts can contain names, phone numbers and personal information. They are saved in the phone memory.

### **To add a phone contact**


- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Scroll to **New number:** and select **Add**.



- 5 Enter the number and select **OK**.
- 6 Select a number type.
- 7 Scroll between tabs and select the fields to add information.
- 8 Select **Save**.

## Calling contacts


### *To call a phone contact*

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to a contact and press .

### *To go directly to the contacts list*

- From standby press and hold down **(2)** – **(9)**.

### *To call with Smart search*

- 1 From standby press **(0+)** – **(9)** to enter a contact name or a phone number. All entries which match the sequence of digits or letters are shown in a list.
- 2 Scroll to a contact or a phone number and press .


### *To turn Smart search on or off*

- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Smart search**.
- 2 Select an option.

## Editing contacts

### *To add information to a phone contact*

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to a contact and select **Options** > **Edit contact**.
- 3 Scroll between the tabs and select **Add** or **Edit**.
- 4 Select an option and an item to add or edit.
- 5 Select **Save**.


 If your subscription supports Calling Line Identification (CLI) service, you can assign personal ringtones and pictures to contacts.

### *To copy names and numbers to phone contacts*

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy from SIM**.
- 3 Select an option.

### *To copy names and numbers to the SIM card*

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Copy to SIM**.
- 3 Select an option.

 When you copy all contacts from your phone to the SIM card, all existing SIM card information is replaced.

### ***To automatically save names and phone numbers on the SIM card***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Auto save on SIM**.
- 3 Select an option.

### ***To save contacts on a memory card***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Back up to m. card**.


### **SIM contacts**

SIM contacts can contain names and numbers only. They are saved on the SIM card.

### ***To add a SIM contact***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Add**.
- 3 Enter the name and select **OK**.
- 4 Enter the number and select **OK**.
- 5 Select a number option and add more information, if available.
- 6 Select **Save**.

### ***To call a SIM contact***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to a contact and press .

### **Deleting contacts**

#### ***To delete all contacts***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Delete all contacts**.
- 3 Select an option.

### **Memory status**

The number of contacts you can save in your phone or on the SIM card depends on available memory.

### ***To view memory status***

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to **New contact** and select **Options** > **Advanced** > **Memory status**.

### **Synchronising contacts**

The Sony Ericsson PC Suite is designed to work with the following programmes:

- Windows Contact (Vista Contacts Manager)
- Windows Calendar (Vista Calendar)
- Microsoft Outlook 2007
- Microsoft Outlook 2003
- Microsoft Outlook 2002
- Microsoft Outlook 2000
- Lotus Notes™ 7
- Lotus Notes 6.5
- Lotus Notes 6

- Lotus Notes 5
  - Windows Address Book (Outlook Express)
  - Sony Ericsson PC Suite proprietary contact & calendar manager
- For more information see *Synchronising* on page 51.

## Groups

You can create a group of phone numbers and email addresses from [Phone contacts](#) to send messages to. See *Messaging* on page 30. You can also use groups (with phone numbers) when you create accepted callers lists.



### *To create a group of numbers and email addresses*

- 1 From standby select [Menu](#) > [Contacts](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Groups](#).
- 3 Scroll to [New group](#) and select [Add](#).
- 4 Enter a name for the group and select [Continue](#).
- 5 Scroll to [New](#) and select [Add](#).
- 6 For each contact phone number or email address you want to mark, scroll to it and select [Mark](#).
- 7 Select [Continue](#) > [Done](#).


## Call list

You can view information about recent calls.

### *To call a number from the call list*

- 1 From standby press  and scroll to a tab.
- 2 Scroll to a name or a number and press .

### *To add a call list number to contacts*

- 1 From standby press  and scroll to a tab.
- 2 Scroll to the number and select [Save](#).
- 3 Select [New contact](#) to create a new contact or select an existing contact to add the number to.


## Speed dial

Speed dialling lets you select nine contacts that you can dial quickly. The contacts can be saved in positions 1-9.

### *To add contacts to speed dial numbers*

- 1 From standby select [Menu](#) > [Contacts](#).
- 2 Scroll to [New contact](#) and select [Options](#) > [Speed dial](#).
- 3 Scroll to a position number and select [Add](#).
- 4 Select a contact.

### *To speed dial*

- From standby enter the position number and press .



## Voicemail

If your subscription includes an answering service, callers can leave a voicemail message when you cannot answer a call.

### **To enter your voicemail number**

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Voicemail number**.
- 2 Enter the number and select **OK**.

### **To call your voicemail service**

- From standby press and hold down **1**.

## Voice control

By creating voice commands you can:

- Voice dial – call someone by saying their name
- Answer and reject calls when you use a handsfree

### **To record a voice command using voice dialling**

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Voice control** > **Voice dialling** > **Activate**.
- 2 Select **Yes** > **New voice command** and select a contact. If the contact has more than one number, select the number to add the voice command to.

- 3 Record a voice command such as “John mobile”.
- 4 Follow the instructions that appear. Wait for the tone and say the command to record. The voice command is played back to you.
- 5 If the recording sounds OK, select **Yes**. If not, select **No** and repeat steps 3 and 4.



*Voice commands are saved in the phone memory only. They cannot be used in another phone.*

### **Voice dialling**

You can hear your recorded contact name when you receive a call from that contact.

### **To voice dial**

- 1 From standby press and hold down a volume key.
- 2 Wait for the tone and say a recorded name, e.g. “John mobile”. The name is played back to you and the call is connected.

### **Voice answering**

When you use a handsfree, you can answer or reject incoming calls with your voice.

### ***To activate voice answering and record voice answer commands***

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Voice control** > **Voice answer** > **Activate**.
- 2 Follow the instructions that appear and select **Cont.**. Wait for the tone and say “Answer”, or another word.
- 3 Select **Yes** to accept or **No** for a new recording.
- 4 Follow the instructions that appear and select **Cont.**. Wait for the tone and say “Busy”, or another word.
- 5 Select **Yes** to accept or **No** for a new recording.
- 6 Follow the instructions that appear and select **Cont.**.
- 7 Select where your voice answering is to be activated.

### ***To answer a call using voice commands***

- Say “Answer”.

### ***To reject a call using voice commands***

- Say “Busy”.



### **Diverting calls**

You can divert calls, e.g., to an answering service.



*When **Restrict calls** is used, some divert call options are not available. See **Restricted dialling** on page 29.*

### ***To divert calls***

- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Divert calls**.
- 2 Select a call type and a divert option.
- 3 Select **Activate**.
- 4 Enter the number to divert calls to and select **OK**.



### **More than one call**

You can handle more than one call at a time. E.g., you can put an ongoing call on hold, while you make or answer a second call. You can also switch between the two calls. You cannot answer a third call without ending one of the first two calls.


### **Call waiting**

When call waiting is used, you hear continuous beep if you receive a second call.


### ***To activate call waiting***

- From standby select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Call waiting** > **Activate**.


### ***To make a second call***

- 1 During the call, select **Options** > **Hold call**. This puts the ongoing call on hold.
- 2 Select **Options** > **Add call**.
- 3 Enter the number to call and press .

### *To answer a second call*

- During the call, press . This puts the ongoing call on hold.

### *To reject a second call*

- During the call, press  and continue with the ongoing call.


### *To end an ongoing call and answer a second call*

- During the call, select **Replace active call**.

### **Handling two voice calls**

You can have calls ongoing and on hold at the same time.

### *To switch between two calls*

- During the call, press .

### *To join two calls*

- During the call, select **Options > Join calls**.



### *To connect two calls*

- During the call, select **Options > Transfer call**. You are disconnected from both calls.

### *To end an ongoing call and return to the call on hold*


- First press  and then .



### **Conference calls**

With a conference call, you can have a joint conversation with up to five people.

### *To add a new participant*

- 1 During the call, select **Options > Hold call**. This puts the joined calls on hold.
- 2 Select **Options > Add call**.
- 3 Enter the number to call and press .
- 4 Select **Options > Join calls** to add the new participant.
- 5 Repeat this task to add more participants.

### *To release a participant*

- 1 Select **Options > Release party**.
- 2 Select the participant to release.

### *To have a private conversation*

- 1 During the call, select **Options > Talk to** and select the participant to talk to.
- 2 To resume the conference call, select **Options > Join calls**.

### **My numbers**

You can view, add and edit your own phone numbers.

### *To check your phone numbers*

- 1 From standby select **Menu > Contacts**.
- 2 Scroll to **New contact** and select **Options > Special numbers > My numbers**.
- 3 Select an option.



## Restricted dialling

You can restrict outgoing and incoming calls. A password from your service provider is required.



*If you divert incoming calls, you cannot use some restrict calls options.*

### Restrict calls options

Standard options are:

- **All outgoing** – all outgoing calls
- **Outgoing intl** – all outgoing international calls
- **Outgoing intl roam.** – all outgoing international calls except to your home country
- **All incoming** – all incoming calls
- **Inc. when roaming** – all incoming calls when you are abroad

### To restrict calls

- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Manage calls** > **Restrict calls**.

- 2 Select an option.
- 3 Select **Activate**.
- 4 Enter your password and select **OK**.



## Call time and cost

During a call, the duration of the call is shown. You can check the duration of your last call, outgoing calls and the total time of your calls.

### To check the call time

- From standby select **Menu** > **Settings** > the **Calls** tab > **Time & cost** > **Call timers**.



## Showing or hiding your phone number

You can decide to show or hide your phone number when you make a call.

### To hide your phone number

- 1 From standby select **Menu** > **Settings** > the **Calls** tab > **Show/hide my no..**
- 2 Select **Hide number**.

# Messaging

## Receiving and saving messages

You are notified when you receive a message. Messages are automatically saved in the phone memory. When the phone memory is full, you can delete messages or save them on a memory card or on the SIM card.

### *To save a message on a memory card*

- From standby select **Menu**  
> **Messaging** > **Settings** > **General**  
> **Save to** > **Memory card**.

### *To save a message on the SIM card*

- 1 From standby select **Menu**  
> **Messaging** and select a folder.
- 2 Scroll to a message and select **Options** > **Save message**.

### *To view a message from the inbox*

- 1 From standby select **Menu**  
> **Messaging** > **Inbox**.
- 2 Scroll to the message and select **View**.

## Text messages

Text messages can contain simple pictures, sound effects, animations, and melodies.

### Before you use messaging

You must have a service centre number. The number is supplied by your service provider and is usually saved on the SIM

card. If the number to your service centre is not saved on your SIM card, you must enter the number yourself.

### *To enter a service centre number*

- 1 From standby select **Menu**  
> **Messaging** > **Settings** > **Text message** and scroll to **Service centre**. The number is shown if it is saved on the SIM card.
- 2 If there is no number shown, select **Edit**.
- 3 Scroll to **New ServiceCentre** and select **Add**.
- 4 Enter the number, including the international “+” sign and country code.
- 5 Select **Save**.

### *To write and send a text message*

- 1 From standby select **Menu** > **Messaging**  
> **Write new** > **Text message**.
- 2 Write the message and select **Continue** > **Contacts look-up**.
- 3 Select a recipient and select **Send**.

❗ If you send a text message to a group, you will be charged for each member. See *Groups on page 25*.

### *To copy and paste text in a text message*


- 1 When you write the message, select **Options** > **Copy & paste**.
- 2 Select **Copy all** or **Mark & copy**. Scroll to and mark text in the message.
- 3 Select **Options** > **Copy & paste** > **Paste**.



### *To add an item to a text message*

- 1 When you write the message, select **Options** > **Add item**.
- 2 Select an option and then an item.

### *To call a number in a text message*

- When you view the message, scroll to the phone number and press .

### *To turn long messages on*

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Text message**.
- 2 Select **Max. msg length** > **Max. available**.

## **Picture messages**

Picture messages can contain text, pictures, slides, sound recordings, video clips, signatures and attachments. You can send picture messages to a phone or an email address.

### **Before you use picture messaging**

You must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator or at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).



### *To select an MMS profile*

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Picture message** > **MMS profile**.
- 2 Select a profile.

### *To set the message server address*

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Picture message**.
- 2 Scroll to **MMS profile** and select **Edit**.
- 3 Select **Options** > **Edit**.
- 4 Scroll to **Message server** and select **Edit**.
- 5 Enter the address and select **OK** > **Save**.

### *To create and send a picture message*

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Picture msg**.
- 2 Enter text. To add items to the message, press , scroll  and select an item.
- 3 Select **Continue** > **Contacts look-up**.
- 4 Select a recipient and select **Send**.

### **Receiving picture messages**

You can select how to download your picture messages. Standard options when you download picture messages are:

- **Always** – automatic download.
- **Ask in roaming** – ask to download when not in home network.
- **Not in roaming** – do not download when not in home network.
- **Always ask** – ask to download.
- **Off** – new messages appear in the **Inbox**.

### ***To set automatic download***

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Picture message** > **Auto download**.
- 2 Select an option.

## **Message options**

You can set standard options for all messages or choose specific settings each time you send a message.

### ***To set text message options***

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Text message**.
- 2 Scroll to an option and select **Edit**.

### ***To set picture message options***

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Picture message**.
- 2 Scroll to an option and select **Edit**.

### ***To set message options for a specific message***

- 1 When the message is ready and a recipient is selected, select **Options** > **Advanced**.
- 2 Scroll to an option and select **Edit**.



## **Voice messages**

You can send and receive a sound recording as a voice message.



*The sender and recipient must have a subscription supporting picture messaging.*

### ***To record and send a voice message***

- 1 From standby select **Menu** > **Messaging** > **Write new** > **Voice message**.
- 2 Record the message and select **Stop** > **Send** > **Contacts look-up**.
- 3 Select a recipient and select **Send**.



## **Email**

You can use standard email functions and your computer email address in your phone.

### ***Before you use email***

You can use the setup wizard to check if settings are available for your email account or you can enter them manually. You can also receive settings at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### ***To create an email account***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Scroll to **New account** and select **Add**.



*If you enter settings manually, you can contact your email provider for more information. An email provider could be the company that supplied your email address.*

### ***To write and send an email message***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Write new**.
- 2 Select **Add** > **Enter email address**. Enter the email address and select **OK**.
- 3 To add more recipients, scroll to **To:** and select **Edit**.
- 4 Scroll to an option and select **Add** > **Enter email address**. Enter the email address and select **OK**. When you are ready, select **Done**.
- 5 Select **Edit** and enter a subject. Select **OK**.
- 6 Select **Edit** and enter the text. Select **OK**.
- 7 Select **Add** and choose a file to attach.
- 8 Select **Cont.** > **Send**.

### ***To receive and read an email message***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Inbox** > **Options** > **Check new email**.
- 2 Scroll to the message and select **View**.

### ***To save an email message***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **View** > **Options** > **Save message**.

### ***To reply to an email message***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Inbox**.
- 2 Scroll to the message and select **Options** > **Reply**.
- 3 Write the reply and select **OK**.
- 4 Select **Cont.** > **Send**.

### ***To view an attachment in an email message***

- When you view the message, select **Options** > **Attachments** > **Use** > **View**.

### ***To save an attachment in an email message***

- When you view the message, select **Options** > **Attachments** > **Use** > **Save**.

### ***Synchronising email***

Email can be synchronised with a Microsoft Exchange Server (Microsoft® Outlook®). For more information see *Synchronising* on page 51.

### ***Active email account***

If you have several email accounts, you can change which one is active.

### ***To change the active email account***

- 1 From standby select **Menu** > **Messaging** > **Email** > **Accounts**.
- 2 Select an account.

## Push email

You can receive notification in your phone from your email server that you have new email messages.

### *To turn on push email notification*

- From standby select [Menu](#) > [Messaging](#) > [Email](#) > [Settings](#) > [Push email](#).

## My friends

You can connect and log in to the My friends server to communicate online with chat messages.

### *Before you use My friends*

If no settings exist in your phone, you need to enter server settings. Your service provider can provide standard settings information such as:

- Username
- Password
- Server address
- Internet profile

### *To enter My friends server settings*

- 1 From standby select [Menu](#) > [Messaging](#) > [My friends](#) > [Configure](#).
- 2 Scroll to a setting and select [Add](#).

### *To log in to the My friends server*

- From standby select [Menu](#) > [Messaging](#) > [My friends](#) > [Log in](#).

### *To log out of the My friends server*

- Select [Options](#) > [Log out](#).

### *To add a chat contact*

- 1 From standby select [Menu](#) > [Messaging](#) > [My friends](#) > the [Contacts](#) tab.
- 2 Select [Options](#) > [Add contact](#).

### *To send a chat message*

- 1 From standby select [Menu](#) > [Messaging](#) > [My friends](#) > the [Contacts](#) tab.
- 2 Scroll to a contact and select [Chat](#).
- 3 Write the message and select [Send](#).

### *Status*

You can show your status, e.g., [Happy](#) or [Busy](#), to your contacts only. You can also show your status to all users on the My friends server.

### *To show my status*

- 1 From standby select [Menu](#) > [Messaging](#) > [My friends](#) > [Options](#) > [Settings](#) > [Show my status](#).
- 2 Select an option.

### *To update your own status*

- 1 From standby select [Menu](#) > [Messaging](#) > [My friends](#) > the [Contacts](#) tab.
- 2 Edit the information.
- 3 Select [Options](#) > [Save](#).

## Chat group

A chat group can be started by your service provider, by an individual My friends user or by yourself. You can save chat groups by saving a chat invitation or by searching for a specific chat group.

### *To create a chat group*

- 1 From standby select **Menu** > **Messaging** > **My friends** > the **Chat groups** tab.
- 2 Select **Options** > **Add chat group** > **New chat group**.
- 3 Select who to invite from your contacts list and select **Cont.**.
- 4 Enter a short invitation text and select **Cont.** > **Send**.

### *To add a chat group*

- 1 From standby select **Menu** > **Messaging** > **My friends** > the **Chat groups** tab > **Options** > **Add chat group**.
- 2 Select an option.

- ! *Conversation history is saved between log out and when you log in again to let you return to chat messages from previous conversations.*

### *To save a conversation*

- 1 From standby select **Menu** > **Messaging** > **My friends** > the **Conversations** tab.
- 2 Enter a conversation.
- 3 Select **Options** > **Advanced** > **Save conversation**.



## Area and cell information

Area and cell information are text messages, e.g., local traffic reports that are sent to subscribers within a certain network area.

### *To turn area information on*

- 1 From standby select **Menu** > **Messaging** > **Settings** > **Area info**.
- 2 Scroll to **Reception** and select **Edit** > **On**.


# Imaging

## Camera and video recorder

You can take pictures and record video clips to view, save or send. You find your saved pictures and video clips in [Media > Photo > Cam. album](#) and [File manager](#).

### Viewfinder and camera keys

1	Brightness
2	Take pictures/Record video

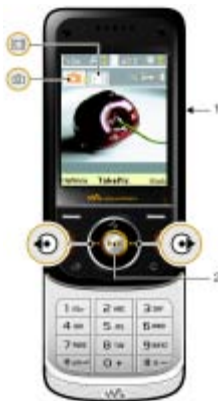

## Using the camera

### To activate the camera

- From standby select [Menu > Camera](#).

### To take a picture

- 1 Activate the camera and press or to scroll to .
- 2 Press the centre navigation key to take a picture.
- 3 The picture is automatically saved to the memory card.

*Do not record with a strong light source in the background. Use a support or the self-timer to avoid a blurred picture.*

### To record a video clip

- 1 Activate the camera and press or to scroll to .
- 2 Press the centre navigation key to start recording.

### To stop recording

- 1 Press the centre navigation key.
- 2 The video clip is automatically saved on the memory card.

### To use zoom

- Press or zoom in or out.

*When taking a picture, zoom is available in VGA mode only.*




### To adjust brightness


- Press  or  to adjust the brightness.

### To view pictures and video clips

- 1 Activate the camera.
- 2 Select [Options](#) > [View all pictures](#).
- 3 To view a video clip, press the centre navigation key.

### To improve a picture with Photo fix

- 1 Activate the camera and press  or  to scroll to .
- 2 Make sure [Review](#) is set to [On](#). Select [Options](#) and scroll to [Review](#) > [On](#).
- 3 Take a picture.
- 4 During review, select [Options](#) > [Photo fix](#).

 You can also use Photo fix on pictures taken previously. When viewing a picture, select [Options](#) > [Photo fix](#).









## Camera icons and settings

Icons on the screen inform what the current setting is. More camera settings are available in [Options](#).

### To change settings

- Activate the camera and select [Options](#).

## Camera shortcuts

Key	Shortcut
 	Zoom
 	Brightness
	Camera: <a href="#">Shoot mode</a> Video: <a href="#">Video length</a>
	<a href="#">Self-timer</a>
	<a href="#">Night mode</a>
 +	Camera key guide

## Transferring pictures

### Transfer to and from your computer

You can use Bluetooth™ wireless technology and the USB cable to transfer pictures and video clips between your computer and phone. See *Bluetooth™ wireless technology* on page 49 and *Transferring content to and from a computer* on page 16 for more information.

You can view, enhance and organise your pictures and video clips on your computer by installing the *Adobe™ Photoshop™ Album Starter Edition*. It is included on the CD that comes with your phone and available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Picture and video blog

A blog is a personal Web page. If your subscription supports this service, you can send pictures or video clips to a blog.

- ! Web services may require a separate licence agreement between you and the service provider. Additional regulations and charges may apply. Contact your service provider.

### To send camera pictures to a blog

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Select **Options** > **Send** > **To blog**.
- 4 Enter a title and text and select **OK**.
- 5 Select **Publish**.

### To send video clips to a blog

- 1 From standby select **Menu** > **Media** and scroll to **Video**.
- 2 Scroll to a video clip.
- 3 Select **Options** > **Send** > **To blog**.
- 4 Enter a title and text and select **OK**.
- 5 Select **Publish**.

### To go to a blog address from contacts

- 1 From standby select **Menu** > **Contacts**.
- 2 Scroll to a contact and select a Web address.
- 3 Select **Go to**.

## Pictures

You can view and tag your pictures in **Media**.

### To view pictures in a slide show

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Select **Options** > **Slide show**.
- 4 Select a mood.




### To turn off location data for pictures

- From standby select **Menu** > **Camera** > **Options** > **Add position** > **Off**.

### Photo tags


You can tag pictures to categorise them. They are saved in **Photo tags**.

### To tag pictures

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Press  and scroll to a tag.
- 4 Press the centre navigation key.
- 5 For each picture you want to tag, use  or  to scroll to the picture and press the centre navigation key.



### *To create a new photo tag*

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Press  and select **Options** > **New tag**.
- 4 Enter a name and select **OK**.
- 5 Select an icon.
- 6 Press the centre navigation key to tag the picture.

### *Using pictures*

You can add a picture to a contact, use it during phone start-up or as a screen saver.

### *To use pictures*

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Select **Options** > **Use as**.
- 4 Select an option.

## **PhotoDJ™ and VideoDJ™**

You can edit pictures and video clips.

### *To edit and save a picture*

- 1 From standby select **Menu** > **Media** and scroll to **Photo** > **Cam. album**.
- 2 Scroll to a month and a picture. Select **View**.
- 3 Select **Options** > **Edit in PhotoDJ™**.
- 4 Edit the picture.
- 5 Select **Options** > **Save picture**.

### *To edit and save a video clip*

- 1 From standby select **Menu** > **Organizer** > **File manager** > **Videos**.
- 2 Scroll to a video clip and select **Options** > **Edit in VideoDJ™**.
- 3 Edit the video clip.
- 4 Select **Options** > **Save**.

### *To trim a video clip*

- 1 From standby select **Menu** > **Organizer** > **File manager** > **Videos**.
- 2 Scroll to a video clip and select **Options** > **Edit in VideoDJ™** > **Edit** > **Trim**.
- 3 Select **Set** to set the starting point and select **Start**.
- 4 Select **Set** to set the ending point and select **End**.
- 5 Select **Trim** > **Options** > **Save**.

# Internet

## *To start browsing*

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Go to**.
- 3 Select an option.

❗ If your connection to the Internet does not work, see *Settings on page 48* or contact your operator.

## *To exit the browser*

- When you browse the Internet, select **Options** > **Exit browser**.

## Bookmarks

You can create and edit bookmarks as quick links to your favourite Web pages.

## *To create a bookmark*

- 1 When you browse the Internet, select **Options** > **Tools** > **Add bookmark**.
- 2 Enter a title and an address. Select **Save**.

## *To select a bookmark*

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Go to** > **Bookmarks**.
- 3 Scroll to a bookmark and select **Go to**.

## History pages

You can view Web pages you have browsed.

## *To view history pages*

- From standby select **Menu** > **Internet** > **Options** > **Go to** > **History**.

## *To use pan and zoom on a Web page*

- 1 When you browse the Internet, press **(# ~ 3)**.
- 2 Use the navigation key to move the frame.
- 3 Press **Zoom**.
- 4 To switch back to pan, press **(# ~ 3)**.

❗ To use pan and zoom, you need to turn off Smart-fit: **Options** > **Advanced** > **Smart-Fit** > **Off**.

## Internet keypad shortcuts

You can use the keypad to go directly to an Internet browser function.

## *To select Internet keypad shortcuts*

- 1 From standby select **Menu** > **Internet**.
- 2 Select **Options** > **Advanced** > **Keypad mode** > **Shortcuts**.

## *To make a call while browsing*

- When you browse the Internet press **📞**.

## *To save a picture from a Web page*

- 1 When you browse the Internet, select **Options** > **Tools** > **Save picture**.
- 2 Select a picture.

### *To find text on a Web page*

- 1 When you browse the Internet, select **Options** > **Tools** > **Find on page**.
- 2 Enter text and press **Find**.

### *To send a link*

- 1 When you browse the Internet, select **Options** > **Tools** > **Send link**.
- 2 Select a transfer method.

! *Make sure the receiving device supports the transfer method you select.*

## Internet security and certificates

Your phone supports secure browsing. Certain Internet services, such as banking, require certificates in your phone. Your phone may already contain certificates when you buy it or you can download new certificates.


### *To view certificates in the phone*

- From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Certificates**.






## Web feeds

You can subscribe to and download frequently updated content, such as news, podcasts or photos, using Web feeds.

### *To add new feeds for a Web page*


- 1 When you browse a page on the Internet that has Web feeds (indicated by the  icon), select **Options** > **Web feeds**.
- 2 For each feed you want to add, scroll to the feed and select **Mark**.
- 3 Select **Options** > **Continue**.

### *To download content via feeds*

- 1 From standby select **Menu** > **Media** > **Web feeds**.
- 2 Scroll to a feed and select **View** or .
- 3 Select a heading to expand.
- 4 Select an icon depending on content,  to open a Web page,  to download an audio podcast,  to download a video podcast or  to download a photo.

💡 *You can also subscribe to and download content to a computer via feeds using Sony Ericsson Media Manager. You can then transfer the content to your phone. See Transferring content to and from a computer on page 16*

### Updating Web feeds

You can manually update your feeds. When there are updates,  appears on the screen.

### ***To update Web feeds manually***

- 1 From standby select **Menu** > **Media** > **Web feeds**.
- 2 Scroll to a feed and select **Options** > **Update**.
- 3 Select an option.

### **Podcasts**

Podcasts are files, e.g., radio programmes or video content, that you can download and play. You subscribe to and download podcasts using Web feeds.

#### **To access audio podcasts**

- From standby select **Menu** > **Media** > **Music** > **Podcasts**.

#### **To access video podcasts**

- From standby select **Menu** > **Media** > **Video** > **Podcasts**.

### **Photo feeds**

You can subscribe to Photo feeds and download photos. To start using Photo feeds, see *Web feeds* on page 41.

#### **To access photo feeds**

- From standby select **Menu** > **Media** > **Photo** > **Photo feeds**.

## **GPS**

Your phone is equipped with a GPS receiver that uses satellite signals to calculate your location.

**!** *Some GPS features use the Internet.*

### **Using the GPS**

Make sure you have a clear view of the sky when using features that require the GPS receiver to find your location. If your location is not found after a few minutes, move to another location. To facilitate the search, stand still and do not cover the GPS antenna.





## Assisted GPS

With Assisted GPS (A-GPS) it takes less time to calculate a location.



Contact your network operator for more information.



## Google Maps™ for mobile

Google Maps™ lets you view maps and satellite imagery, find locations and calculate routes.

### To use Google Maps

- From standby select [Menu](#) > [Location services](#) > [Google Maps](#).

### To view help about Google Maps

- When you use Google Maps, select [Options](#) > [Help](#).



## Driving directions

Wayfinder Navigator™ guides you to your destination using voice instructions. A free three-month trial version of Wayfinder Navigator is included in the phone.



*Sony Ericsson does not warrant the accuracy of any directional services including but not limited to turn-by-turn navigational services.*

## To start Wayfinder Navigator

- From standby select [Menu](#) > [Location services](#) > [Navigation](#).

## More GPS features

### Save locations

All saved locations are found in [My favourites](#).

### To save your current location

- From standby select [Menu](#) > [Location services](#) > [My favourites](#) > [Add new place](#).
- Select [Edit](#) and enter the title. Select [OK](#).
- Scroll to [Description](#): and select [Add](#). Enter the description and select [OK](#).
- Scroll to [Position](#): and select [Add](#) > [Current position](#).

### To view a saved location

- From standby select [Menu](#) > [Location services](#) > [My favourites](#).
- Scroll to a location and select [Go to](#).



When you use Google Maps you can press [a/a](#) to access your favourites.

## Status information

When your location is found you can view available satellites and get information about your current speed and altitude.

### To view GPS status

- 1 From standby select **Menu** > **Location services** > **Status info**.
- 2 Scroll between the tabs.

### Location requests

External services may ask for your location.

### To change permission for external services

- 1 From standby select **Menu** > **Location services** > **Settings** > **Permission**.
- 2 Select an option.

### Turn off the GPS

The GPS receiver is automatically turned off when it is no longer used. You can also manually turn off the GPS receiver. This saves battery power when using features that do not require the GPS receiver to find your location.

### To turn the GPS on or off manually

- 1 From standby select **Menu** > **Location services** > **Settings**.
- 2 Select an option.

## Tracker

Tracker is a GPS-based sports application which allows you to keep track of your speed, distance, route and energy consumption during training.



*Information provided by use of the Tracker application is approximate. Sony Ericsson makes no warranty of any kind with respect to the accuracy of the Tracker application. Any serious health and fitness concerns should be referred to a health care professional.*

You can base the training on how long time you want to train or on what distance you want to cover. You can also base it on a previous training route which has GPS data.

### To start a training session

- 1 From standby select **Menu** > **Location services** > **Tracker** > **Start training**.
- 2 Select a training type.
- 3 Scroll to an item, select **Edit** and enter the data.
- 4 Select **Done** to save.
- 5 Select **Start** to start training.

### To compare results during training

- 1 From standby select **Menu** > **Location services** > **Tracker** > **Start training**.
- 2 Select **Route based**.
- 3 Scroll to **Route**:, select **Edit** and select a route.
- 4 Scroll to **Live compare** and select **Edit**.
- 5 Scroll to the result you want to compare with and select **Compare**.
- 6 Select **Done** and then **Start**.

- ! You must have previously saved a route for comparison.

### **To switch between training views**

- During a training session, press ⏮ or ⏭ to view information on training duration, progress and live comparison with a previous session.

### **To end a training session manually**

- During a training session, select **Pause** > **End**.

### **Results**

The training result is shown after a session is ended. You can view past results anytime, and compare them if they have GPS data.

### **To view a training result**

- From standby select **Menu** > **Location services** > **Tracker** > **Results**. If you have used laps, press ⏮ or ⏭ to view result per lap.

### **To compare results**

- 1 From standby select **Menu** > **Location services** > **Tracker** > **Results**.
- 2 Scroll to a result and select **Options** > **Compare**.
- 3 Select a result to compare with.

- ! You must have previously saved a route for comparison.

### **Energy consumption**

To calculate and view the energy consumption for a session you must first set your personal profile. You view the energy consumption in the result view.

### **To set the personal profile**

- 1 From standby select **Menu** > **Location services** > **Tracker** > **Settings** > **Personal profile**.
- 2 Select an item, enter data and press **OK**.
- 3 When finished, select **Options** > **Save profile**.

### **To turn on energy consumption**

- From standby select **Menu** > **Location services** > **Tracker** > **Settings** > **Energy consumption** > **On**.

# Entertainment

## Video player

### To play videos

- 1 From standby select **Menu** > **Media** and scroll to **Video**.
- 2 Scroll to a title and select **Play**.

### To stop playing videos

- Press the centre navigation key.

## Radio

- ! Do not use your phone as a radio in places where this is prohibited.

### To listen to the radio

- 1 Connect the handsfree to the phone.
- 2 From standby select **Menu** > **Entertainment** > **Radio**.

### To change the volume

- When the radio is playing, press the volume keys up or down.

### To automatically search for channels

- When the radio is playing, select **Search**.

### To manually search for channels

- When the radio is playing, press **⏮** or **⏭**.

### Saving channels

You can save up to 20 preset channels.

### To save channels

- 1 When you have found a radio channel select **Options** > **Save**.
- 2 Scroll to a position and select **Insert**.

### To select saved channels

- 1 From standby select **Menu** > **Entertainment** > **Radio** > **Options** > **Channels**.
- 2 Select a radio channel.

### To switch between saved channels

- When the radio is playing, press **⏮** or **⏭**.

## Ringtones and melodies

### To set a ringtone

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ringtone**.
- 2 Find and select a ringtone.

### To set the ringtone volume

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Ring volume**.
- 2 Press **⏮** or **⏭** to change the volume.
- 3 Select **Save**.

### To turn the ringtone off

- From standby press and hold down **(#-0-\*)**.

- ! All signals except the alarm signal are affected.







### *To set the vibrating alert*

- 1 From standby select **Menu** > **Settings** > the **Sounds & alerts** tab > **Vibrating alert**.
- 2 Select an option.

## **MusicDJ™**

You can compose and edit your own melodies to use as ringtones. A melody consists of four types of tracks – **Drums**, **Basses**, **Chords**, and **Accents**. A track contains a number of music blocks. The blocks consist of pre-arranged sounds with different characteristics. The blocks are grouped into **Intro**, **Verse**, **Chorus**, and **Break**. You compose a melody by adding music blocks to the tracks.

### *To compose a melody*

- 1 From standby select **Menu** > **Entertainment** > **MusicDJ™**.
- 2 Select to **Insert**, **Copy** or **Paste** blocks.
- 3 Use , ,  or  to scroll between the blocks.
- 4 Select **Options** > **Save melody**.

## **Sound recorder**

You can record a voice memo or a sound. Recorded sounds can also be set as ringtones.

### *To record a sound*

- From standby select **Menu** > **Entertainment** > **Record sound** > **Record**.

### *To listen to a recording*

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Scroll to **Music** and select **Open**.
- 3 Scroll to a recording and select **Play**.

## **Games**

Your phone contains preloaded games. You can also download games. Help texts are available for most games.

### *To start a game*

- 1 From standby select **Menu** > **Media** > **Games**.
- 2 Select a game.

### *To end a game*

- Press .

## **Applications**

You can download and run Java applications. You can also view information or set different permissions.

### **Before you use Java™ applications**

If Internet settings are not already entered in your phone, see *Settings* on page 48.

### *To select a Java application*

- 1 From standby select **Menu** > **Organizer** > **Applications**.
- 2 Select an application.

### *To view information about a Java application*

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Information](#).

### *To set permissions for a Java application*

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Permissions](#).
- 3 Set permissions.

### **Java application screen size**

Some Java applications are designed for a specific screen size. For more information, contact the application vendor.

### *To set the screen size for a Java application*

- 1 From standby select [Menu](#) > [Organizer](#) > [Applications](#).
- 2 Scroll to an application and select [Options](#) > [Screen size](#).
- 3 Select an option.

### **Internet profiles for Java applications**

Some Java applications need to connect to the Internet to receive information. Most Java applications use the same Internet settings as your Web browser.



## Connectivity

### Settings

Before you synchronise with an Internet service, use the Internet, PlayNow™, My friends, Java, picture messaging, email and picture blog you need to have settings in your phone.

If settings are not already entered, you can download settings using the setup wizard or by going to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

#### *To download settings using the Setup wizard*

- 1 From standby select [Menu](#) > [Settings](#) > the [General](#) tab > [Setup wizard](#) > [Settings download](#).
- 2 Follow the instructions that appear.



Contact your network operator or service provider for more information.

#### *To download settings using a computer*

- 1 Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).
- 2 Follow the instructions on the screen.

### Phone name

You can enter a name for your phone that is shown to other devices when using, e.g., Bluetooth™ wireless technology.


### **To enter a phone name**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Phone name**.
- 2 Enter the phone name and select **OK**.

## **Bluetooth™ wireless technology**

The Bluetooth function makes wireless connection to other Bluetooth devices possible. You can, e.g.:

- Connect to handsfree devices.
- Connect to several devices at the same time.
- Connect to computers and access the Internet.
- Exchange items and play multiplayer games.

 *We recommend a range within 10 metres (33 feet), with no solid objects in between, for Bluetooth communication.*

### **Before you use Bluetooth wireless technology**

You must turn on the Bluetooth function to communicate with other devices. You may also have to pair your phone with other Bluetooth devices.

### **To turn the Bluetooth function on**

- From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Turn on**.

- ! *Make sure that the device you want to pair your phone with has the Bluetooth function activated and Bluetooth visibility set to on.*

### **To receive an item**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **Turn on**.
- 2 When you receive an item, follow the instructions that appear.

### **To pair the phone with a device**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **My devices**.
- 2 Scroll to **New device** and select **Add** to search for available devices.
- 3 Select a device.
- 4 Enter a passcode, if required.

### **To allow connection to the phone**

- 1 From standby select **Menu** > **Settings** > the **Connectivity** tab > **Bluetooth** > **My devices**.
- 2 Select a device from the list.
- 3 Select **Options** > **Allow connection**.
- 4 Select **Always ask** or **Always allow**.

- ! *This is only possible with devices that require access to a secure service.*

### ***To pair the phone with a Bluetooth handsfree for the first time***

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.**
- 2 Scroll to a device and select **Yes.**
- 3 Enter a passcode, if required.

### ***To pair the phone with more than one Bluetooth handsfree***

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > My handsfree > New handsfree.**
- 2 Select a device from the list.
- 3 Enter a passcode, if required.

### **Power saving**

You can save battery power with the Power save function. You can only connect with one Bluetooth device at a time when using Power save. You must turn this function off if you want to connect with more than one Bluetooth device at the same time.

### ***To turn powersave on***

- From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Powersave > On.**

### **Transferring sound to and from a Bluetooth handsfree**

You can transfer the sound to and from a Bluetooth handsfree using a phone key or the handsfree key.

### ***To transfer sound***

- 1 From standby select **Menu > Settings > the Connectivity tab > Bluetooth > Handsfree > Incoming call.**
- 2 Select an option. **In phone** transfers sound to the phone. **In handsfree** transfers sound to the handsfree.

### ***To transfer sound during a call***

- 1 During a call, select **Sound.**
- 2 Select from the list.

## **Using the USB cable**

You can connect your phone to a computer with the USB cable to transfer files, synchronise and use your phone as a modem. For more information go to the Getting started section at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).



## Before you use the USB cable

- See *Required operating systems* on page 16.

! *Only use a USB cable supported by your phone. Do not remove the USB cable from your phone or computer during file transfer as this may corrupt the phone memory or the memory card.*

## To disconnect the USB cable safely

- 1 Right-click the removable disk icon in *Windows Explorer*.
- 2 Select *Eject*.
- 3 Disconnect the USB cable when the following message is shown in the phone: *Mass storage session ended. It is now safe to remove the USB cable.*

## Drag and drop content

You can drag and drop content between your phone or memory card and a computer in *Microsoft Windows Explorer*.

## To drag and drop content

- 1 Connect your phone to a computer using the USB cable.
- 2 **Phone:** Select *Media transfer*. The phone will remain activated during file transfer.

- 3 **Computer:** Wait until the phone icon appears in *My Computer* and then double click to open. Phone memory and memory card appear as external drives. Drag and drop selected files between the phone and the computer.

## Synchronising

You can synchronise in two different ways:

- You can use the USB cable or Bluetooth wireless technology to synchronise phone contacts, appointments, bookmarks, tasks and notes with a computer programme such as Microsoft Outlook.
- You can synchronise with an Internet service using SyncML™ or a Microsoft® Exchange Server using Microsoft Exchange ActiveSync. For more information go to the Getting started section at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

💡 *Use only one of the synchronisation methods at a time with your phone.*

## Synchronising using a computer

Before synchronising you need to install *the Sony Ericsson PC Suite*.



*Sony Ericsson PC Suite software is included on the CD with your phone and available for download at [www.sonyericsson.com/support](http://www.sonyericsson.com/support).*

See *Required operating systems* on 16.

### To install the Sony Ericsson PC Suite

- 1 Turn on your computer and insert the CD. The CD starts automatically and the installation window opens.
- 2 Select a language and click **OK**.
- 3 Click *Install Sony Ericsson PC suite* and follow the instructions on the screen.

### To synchronise using the PC Suite

- 1 **Computer:** Start *PC Suite* from *Start/Programmes/Sony Ericsson/PC Suite*.
- 2 Follow the instructions in the *PC Suite* for how to connect.
- 3 **Phone:** Select **Phone mode**.
- 4 **Computer:** When you are notified that the *Sony Ericsson PC Suite* has found your phone, you can start synchronising.



*For usage details, see the Sony Ericsson PC Suite Help section once the software has been installed on your computer.*

## Synchronising using an Internet service

You can synchronise online using SyncML or Microsoft Exchange Active Sync. If Internet settings are not in your phone, see *Settings* on page 48.

### SyncML

You can synchronise remote data and personal information using SyncML.

### Before you synchronise using SyncML

You must enter settings for SyncML synchronisation and register a synchronisation account online with a service provider. Settings that are required are:

- **Server address** – server URL
- **Database name** – database to synchronise with

### To enter settings for SyncML

- 1 From standby select **Menu > Organizer > Synchronization**.
- 2 Scroll to **New account** and select **Add > SyncML**.
- 3 Enter a name for the new account and select **Cont**.
- 4 Select **Server address**. Enter the required information and select **OK**.


- 5 Enter [Username](#) and [Password](#), if required.
- 6 Scroll to the [Applications](#) tab and mark applications to synchronise.
- 7 Scroll to the [App. settings](#) tab and select an application.
- 8 Select [Database name](#) and enter the required information.
- 9 Scroll to the [Advanced](#) tab to enter additional settings for synchronising and select [Save](#).

### ***To synchronise using SyncML***

- 1 From standby select [Menu](#) > [Organizer](#) > [Synchronization](#).
- 2 Scroll to an account and select [Start](#).

### **Microsoft® Exchange ActiveSync**


You can access and synchronise corporate exchange information such as email, contacts and calendar entries using Microsoft® Exchange Server with Microsoft® Exchange ActiveSync.

 *For more information on synchronisation settings, contact your IT administrator.*

### **Before you synchronise using Microsoft® Exchange ActiveSync**

You must enter settings for Microsoft Exchange ActiveSync to access a Microsoft Exchange Server. Settings that are required are:

- [Server address](#) – server URL
- [Domain](#) – server domain
- [Username](#) – account username
- [Password](#) – account password

 *Before you start to synchronise with Exchange ActiveSync you must enter the correct time zone in your phone.*

### ***To enter settings for Microsoft® Exchange ActiveSync***

- 1 From standby select [Menu](#) > [Organizer](#) > [Synchronization](#).
- 2 Scroll to [New account](#) and select [Add](#) > [Exchange ActiveSync](#).
- 3 Enter a name for the new account and select [Cont](#).
- 4 Enter the required settings.
- 5 Scroll between the tabs to enter additional settings.
- 6 Select [Save](#).

### ***To synchronise using Microsoft® Exchange ActiveSync***

- 1 From standby select **Menu** > **Organizer** > **Synchronization**.
- 2 Scroll to an account and select **Start**.



### **Update service**

You can update your phone with the latest software. You do not lose personal or phone information.

There are two ways to update your phone:

- Over the air using your phone
- Using the provided USB cable and an Internet-connected computer



*Update service requires data access such as GPRS, 3G or HSDPA.*

### ***To set a reminder to use Update service***

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Update service** > **Settings** > **Reminder**.
- 2 Select an option.

### **Before you use the Update service**

If Internet settings are not in your phone see *Settings* on page 48.

### ***To change Internet settings***

- From standby select **Menu** > **Settings** > the **General** tab > **Update service** > **Settings** > **Internet settings**.

### ***To view the current software in the phone***

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Update service**.
- 2 Select **Software version**.

### ***To use Update service using the phone***

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Update service**.
- 2 Select **Search for update** and follow the instructions that appear.

### ***To use Update service using a USB cable***

- 1 Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) or click the **Sony Ericsson Update service in the PC Suite software** if installed on your computer. See *To install the Sony Ericsson PC Suite* on page 52.
- 2 Select a region and country.
- 3 Follow the instructions on the screen.




# More features

## Flight mode

In **Flight mode** the network and radio transceivers are turned off to prevent disturbance to sensitive equipment.

When the flight mode menu is activated you are asked to select a mode the next time you turn on your phone:

- **Normal mode** – full functionality
- **Flight mode** – limited functionality

 You can use the Bluetooth™ function in **Flight mode**.

### To activate the flight mode menu

- From standby select **Menu** > **Settings** > the **General** tab > **Flight mode** > **Show at startup**.

### To select flight mode



- 1 When the flight mode menu is activated, turn off your phone.
- 2 Turn on your phone and select **Flight mode**.

## File manager

You can use the file manager to handle files saved in the phone memory or on a memory card.

## Handling files

You can move and copy files between your phone, a computer and a memory card. See *Transferring content to and from a computer* on page 16. Files are saved on the memory card first and then in the phone memory. Unrecognised files are saved in the **Other** folder.

 *You are not allowed to exchange some copyright-protected material. A protected file has a  icon.*

You can create subfolders to move or copy files to. You can select more than one or all the files in a folder at the same time for all folders except **Games** and **Applications**.

If the memory is full, delete some content to create space.

## File manager tabs

The file manager is divided into three tabs, and icons indicate where the files are saved.

### To view information about files

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find a file and select **Options** > **Information**.

### *To move a file in the file manager*

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Find a file and select **Options** > **Manage file** > **Move**.
- 3 Select **Memory card** or **Phone**.
- 4 Open a folder.
- 5 Select **Paste**.

### *To select more than one file in a folder*

- 1 From standby select **Menu** > **Organizer** > **File manager**.
- 2 Scroll to a folder and select **Open**.
- 3 Select **Options** > **Mark** > **Mark several**.
- 4 For each file you want to mark, scroll to the file and select **Mark**.

## **Alarms**

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off. When the alarm sounds you can silence it or turn it off.

### *To set the alarm*

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Time**: and select **Edit**.
- 4 Enter a time and select **OK** > **Save**.

### *To set the recurrent alarm*

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to **Recurrent**: and select **Edit**.
- 4 Scroll to a day and select **Mark**.
- 5 To select another day, scroll to the day and select **Mark**.
- 6 Select **Done** > **Save**.

### *To silence the alarm*

- When the alarm sounds, press any key.
- To repeat the alarm, select **Snooze**.

### *To turn off the alarm*

- When the alarm sounds, press any key and select **Turn off**.


### *To cancel the alarm*

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Turn off**.

### *The alarm in silent mode*

You can set the alarm not to sound when the phone is in silent mode.

### *To set an alarm to sound or not in silent mode*

- 1 From standby select **Menu** > **Organizer** > **Alarms**.
- 2 Scroll to an alarm and select **Edit**.
- 3 Scroll to the  tab.
- 4 Scroll to **Silent mode**: and select **Edit**.
- 5 Select an option.

## Calendar

The calendar can be synchronised with a computer calendar, with a calendar on the Web or with a Microsoft® Exchange Server (Microsoft® Outlook®).

For more information see *Synchronising* on page 51.

### Default view

You can choose whether month, week or day view will appear first when you open the calendar.

### To set default view

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select **Options** > **Advanced** > **Default view**.
- 3 Select an option.

### Appointments

You can add new appointments or reuse existing appointments.

### To add an appointment

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Scroll to **New appointment** and select **Add**.
- 4 Enter the information and confirm each entry.
- 5 Select **Save**.

### To view an appointment

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.

### To edit an appointment

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Scroll to an appointment and select **View**.
- 4 Select **Options** > **Edit**.
- 5 Edit the appointment and confirm each entry.
- 6 Select **Save**.

### To view a calendar week

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Select **Options** > **Change view to** > **Week**.

### To set when reminders should sound

- 1 From standby select **Menu** > **Organizer** > **Calendar**.
- 2 Select a date.
- 3 Select **Options** > **Advanced** > **Reminders**.
- 4 Select an option.

- ! A reminders option set in calendar affects a reminders option set in tasks.

## Notes

You can make notes and save them.  
You can also show a note in standby.

### To add a note

- 1 From standby select **Menu** > **Organizer** > **Notes**.
- 2 Scroll to **New note** and select **Add**.
- 3 Write a note and select **Save**.

### To show a note in standby

- 1 From standby select **Menu** > **Organizer** > **Notes**.
- 2 Scroll to a note and select **Options** > **Show in standby**.

### To hide a note from standby

- 1 From standby select **Menu** > **Organizer** > **Notes**.
- 2 Scroll to a note and select **Options** > **Hide in standby**.

## Tasks

You can add new tasks or reuse existing tasks.

### To add a task

- 1 From standby select **Menu** > **Organizer** > **Tasks**.
- 2 Select **New task** and select **Add**.
- 3 Select an option.
- 4 Enter details and confirm each entry.

### To view a task

- 1 From standby select **Menu** > **Organizer** > **Tasks**.
- 2 Scroll to a task and select **View**.

### To set when reminders should sound

- 1 From standby select **Menu** > **Organizer** > **Tasks**.
- 2 Scroll to a task and select **Options** > **Reminders**.
- 3 Select an option.

- ! A reminders option set in tasks affects a reminders option set in calendar.

## Profiles

You can change settings such as the ring volume and vibrating alert to suit different locations. You can reset all profiles to the phone's original settings.

### To select a profile

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Select a profile.

### *To view and edit a profile*

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Profiles**.
- 2 Scroll to a profile and select **Options** > **View and edit**.



*You cannot rename the Normal profile.*

## Time and date

### *To set the time*

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Time**.
- 2 Enter the time and select **Save**.

### *To set the date*

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **Date**.
- 2 Enter the date and select **Save**.

### *To set the time zone*

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Time & date** > **My time zone**.
- 2 Select the time zone you are in.



*If you select a city, **My time zone** also updates the time when daylight saving time changes.*

## Theme

You can change the appearance of the screen through items such as colours and wallpaper. You can also create new themes and download them. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

### *To set a theme*

- 1 From standby select **Menu** > **Settings** > the **Display** tab > **Theme**.
- 2 Scroll to a theme and select **Set**.

## Main menu layout

You can change the layout of the icons in the main menu.

### *To change the main menu layout*

- 1 From standby select **Menu** > **Options** > **Main menu layout**.
- 2 Select an option.

## Locks

### **SIM card lock**

This lock only protects your subscription. Your phone will work with a new SIM card. If the lock is on, you have to enter a PIN (Personal Identity Number).

If you enter your PIN incorrectly three times in a row, the SIM card is blocked and you need to enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

### **To unblock the SIM card**

- 1 When **PIN blocked** appears, enter your PUK and select **OK**.
- 2 Enter a new four-to-eight-digit PIN and select **OK**.
- 3 Re-enter the new PIN and select **OK**.

### **To edit the PIN**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM protection > Change PIN**.
- 2 Enter your PIN and select **OK**.
- 3 Enter a new four-to-eight-digit PIN and select **OK**.
- 4 Re-enter the new PIN and select **OK**.

- ! If **Codes do not match** appears, you entered the new PIN incorrectly. If **Wrong PIN** appears, followed by **Old PIN**:, you entered your old PIN incorrectly.

### **To use the SIM card lock**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > SIM protection > Protection**.
- 2 Select an option.
- 3 Enter your PIN and select **OK**.

### **Phone lock**

You can stop unauthorised use of your phone. Change the phone lock code (0000) to any four-to-eight-digit personal code.

- ! It is important that you remember your new code. If you forget it, you have to take your phone to your local Sony Ericsson retailer.

### **To use the phone lock**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > Phone protection > Protection**.
- 2 Select an option.
- 3 Enter the phone lock code and select **OK**.

### **To unlock the phone**

- Enter your code and select **OK**.

### **To change the phone lock code**

- 1 From standby select **Menu > Settings > the General tab > Security > Locks > Phone protection > Change code**.
- 2 Enter the old code and select **OK**.
- 3 Enter the new code and select **OK**.
- 4 Repeat the code and select **OK**.

## Keypad lock

You can set this lock to avoid accidental dialling. Incoming calls can be answered without unlocking the keypad.

- ! *Calls to the international emergency number 112 can still be made.*

### To use the automatic keylock

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Security** > **Automatic keylock**.
- 2 Select an option.

### To unlock the keypad manually

- From standby press any key and select **Unlock** > **OK**.

## IMEI number

Keep a copy of your IMEI (International Mobile Equipment Identity) number in case your phone is stolen.

### To view your IMEI number

- From standby press **\*a/A**, **#w3**, **0 +**, **6**, **#w3**.

## Troubleshooting

Some problems will require you to call your network operator.

For more support go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support).

## Common questions

### Master reset

If you select **Reset settings**, the changes that you have made to settings will be deleted.

If you select **Reset all**, in addition to your changes to settings, all contacts, messages, personal data, and content that you have downloaded, received or edited will also be deleted.

### To reset the phone

- 1 From standby select **Menu** > **Settings** > the **General** tab > **Master reset**.
- 2 Select an option.
- 3 Follow the instructions that appear.

### *I cannot charge the phone or battery capacity is low*

The charger is not properly connected or the battery connection is poor. Remove the battery and clean the connectors.

The battery is worn out and needs to be replaced. See *Charging the battery* on page 8.

***No battery icon appears when I start charging the phone***

It may take a few minutes before the battery icon appears on the screen.

***Some menu options appear in grey***

A service is not activated. Contact your network operator.

***I cannot use SMS/text messages on my phone***

Settings are missing or incorrect. Contact your network operator to find out the correct SMS service centre setting. See *Text messages* on page 30.

***I cannot use picture messages on my phone***

Your subscription does not include data capability. Settings are missing or incorrect. Please contact your network operator.

See *Help in your phone* on page 7 or go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to order settings and follow the instructions on the screen. See *Settings* on page 48.

***I cannot use the Internet***

Your subscription does not include data capability. Internet settings are missing or incorrect. Please contact your network operator.

See *Help in your phone* on page 7 or go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to order Internet settings, and follow the instructions on the screen. See *Settings* on page 48.

***The phone does not ring or rings too softly***

Make sure that [Silent mode](#) has not been set to [On](#). See *To turn the ringtone off* on page 46.

Check the ringtone volume. See *To set the ringtone volume* on page 46.

Check the profile. See *To select a profile* on page 58.

Check the call diverting options. See *To divert calls* on page 27.

***The phone cannot be detected by other devices using Bluetooth wireless technology***

You have not turned the Bluetooth function on. Make sure that the visibility is set to show phone. See *To turn the Bluetooth function on* on page 49.



***I cannot synchronise or transfer data between my phone and my computer, when using the USB cable.***

The cable or software that came with your phone has not been properly installed. Go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) to read Getting started guides which contain detailed installation instructions and troubleshooting guides.

***I have forgotten my code memo passcode***

If you forget your passcode, you must reset the code memo. This means that all entries in the code memo are deleted. The next time you enter the code memo, you must proceed as if you are opening it for the first time.

***To reset code memo***

- 1 From standby select **Menu** > **Organizer** > **Code memo**.
- 2 Enter any passcode to access the code memo. The checkword and codes that are then shown are incorrect.
- 3 Select **Options** > **Reset**.
- 4 **Reset code memo?** appears.
- 5 Select **Yes**.

***Where can I find the regulatory information such as my IMEI number if I cannot turn on my phone?***



## **Error messages**

### **Insert SIM**

There is no SIM card in your phone or you may have inserted it incorrectly.

See *To insert the SIM card* on page 5.

The SIM card connectors need cleaning. If the card is damaged, contact your network operator.

### **Insert correct SIM card**

Your phone is set to work only with certain SIM cards. Check if you are using the correct operator SIM card.

### **Wrong PIN/Wrong PIN2**

You have entered your PIN or PIN2 incorrectly.

Enter the correct PIN or PIN2 and select **Yes**. See *PIN* on page 7.

### **PIN blocked/PIN2 blocked**

You have entered your PIN or PIN2 code incorrectly three times in a row.

To unblock, see *SIM card lock* on page 59.

### **Codes do not match**

Codes that you have entered do not match. When you want to change a security code, e.g. your PIN, you have to confirm the new code. See *SIM card lock* on page 59.

### **No netw. coverage**

Your phone is in flight mode.  
See *Flight mode* on page 55.

Your phone is not receiving any network signal, or the received signal is too weak. Contact your network operator and make sure that the network has coverage where you are.

The SIM card is not working properly. Insert your SIM card in another phone. If this works, it is probably your phone that is causing the problem. Please contact the nearest Sony Ericsson service location.

### **Emerg. calls only**

You are within range of a network, but you are not allowed to use it. However, in an emergency, some network operators allow you to call the international emergency number 112. See *Emergency calls* on page 22.

### **PUK blocked. Contact operator.**

You entered your personal unblocking key code (PUK) incorrectly 10 times in a row.

# Important information

## Sony Ericsson Consumer Web site

On [www.sonyericsson.com/support](http://www.sonyericsson.com/support) is a support section where help and tips are only a few clicks away. Here you will find the latest computer software updates and tips on how to use your product more efficiently.

## Service and support

From now on you will have access to a portfolio of exclusive service advantages such as:

- Global and local Web sites providing support.
- A global network of Call Centres.
- An extensive network of Sony Ericsson service partners.
- A warranty period. Learn more about the warranty conditions in this User guide.

On [www.sonyericsson.com](http://www.sonyericsson.com), under the support section in the language of your choice, you will find the latest support tools and information, such as software updates, Knowledge base, phone setup and additional help when you require it.

## Support

Argentina	800-333-7427
Australia	1-300650-600
Belgique/België	02-7451611
Brasil	4001-04444
Canada	1-866-766-9374
Central Africa	+27 112589023
Chile	123-0020-0656
Colombia	18009122135
Česká republika	844550 055
Danmark	33 31 28 28
Deutschland	0180 534 2020
Ελλάδα	801-11-810-810
	210-89 91 919
España	902 180 576

For operator-specific services and features, please contact your network operator for more information.

You can also contact our Call Centres. Use the phone number for the nearest Call Centre in the list below. If your country/region is not represented in the list, please contact your local dealer. (The phone numbers below were correct at the time of going to print. On [www.sonyericsson.com](http://www.sonyericsson.com) you can always find the latest updates.)

In the unlikely event that your product needs service please contact the dealer from whom it was purchased, or one of our service partners. Save your original proof of purchase, you will need it if you need to claim warranty.

You will be charged for a call to one of our Call Centres according to national rates, including local taxes, unless the phone number is a toll-free number.

questions.AR@support.sonyericsson.com  
questions.AU@support.sonyericsson.com  
questions.BE@support.sonyericsson.com  
questions.BR@support.sonyericsson.com  
questions.CA@support.sonyericsson.com  
questions.CF@support.sonyericsson.com  
questions.CL@support.sonyericsson.com  
questions.CO@support.sonyericsson.com  
questions.CZ@support.sonyericsson.com  
questions.DK@support.sonyericsson.com  
questions.DE@support.sonyericsson.com  
questions.GR@support.sonyericsson.com  
questions.ES@support.sonyericsson.com

France	0 825 383 383
Hong Kong/ 香港	8203 8863
Hrvatska	062 000 000
India/ भारत	39011111
Indonesia	021-2701388
Ireland	1850 545 888
Italia	06 48895206
Lietuva	8 70055030
Magyarország	+36 1 880 4747
Malaysia	1-800-889900
México	01 800 000 4722
Nederland	0900 899 8318
New Zealand	0800-100150
Norge	815 00 840
Österreich	0810 200245
Pakistan	111 22 55 73 (92-21) 111 22 55 73
Philippines/Pilipinas	02-6351860
Polska	0 (prefiks) 22 6916200
Portugal	808 204 466
România	(+4021) 401 0401
Россия	8 (495) 787 0986
Schweiz/Suisse/Svizzera	0848 824 040
Singapore	67440733
Slovenko	02-5443 6443
South Africa	0861 6322222
Suomi	09-299 2000
Sverige	013-24 45 00
Türkiye	0212 473 77 71
Україна	(+0380) 44 590 1515
United Kingdom	08705 23 7237
United States	1-866-7669347
Venezuela	0-800-100-2250
الإمارات العربية المتحدة	43 919880
中国	4008100000
台灣	02-25625511
ไทย	02-2483030

questions.FR@support.sonyericsson.com
questions.HK@support.sonyericsson.com
questions.HR@support.sonyericsson.com
questions.IN@support.sonyericsson.com
questions.ID@support.sonyericsson.com
questions.IE@support.sonyericsson.com
questions.IT@support.sonyericsson.com
questions.LT@support.sonyericsson.com
questions.HU@support.sonyericsson.com
questions.MY@support.sonyericsson.com
questions.MX@support.sonyericsson.com
questions.NL@support.sonyericsson.com
questions.NZ@support.sonyericsson.com
questions.NO@support.sonyericsson.com
questions.AT@support.sonyericsson.com
questions.PK@support.sonyericsson.com
questions.PH@support.sonyericsson.com
questions.PL@support.sonyericsson.com
questions.PT@support.sonyericsson.com
questions.RO@support.sonyericsson.com
questions.RU@support.sonyericsson.com
questions.CH@support.sonyericsson.com
questions.SG@support.sonyericsson.com
questions.SK@support.sonyericsson.com
questions.ZA@support.sonyericsson.com
questions.FI@support.sonyericsson.com
questions.SE@support.sonyericsson.com
questions.TR@support.sonyericsson.com
questions.UA@support.sonyericsson.com
questions.GB@support.sonyericsson.com
questions.US@support.sonyericsson.com
questions.VE@support.sonyericsson.com
questions.AE@support.sonyericsson.com
questions.CN@support.sonyericsson.com
questions.TW@support.sonyericsson.com
questions.TH@support.sonyericsson.com

## Guidelines for Safe and Efficient Use

Please follow these guidelines. Failure to do so might entail a potential health risk or product malfunction. If in doubt as to its proper function, have the product checked by a certified service partner before charging or using it.



### Recommendations for safe use of our products

- Handle with care and keep in a clean and dust-free place.
- Warning! May explode if disposed of in fire.
- Do not expose your product to liquid or moisture or excess humidity.
- Do not expose to extreme temperatures. Do not expose the battery to temperatures above +60°C (+140°F).
- Do not drop, throw or try to bend your product.
- Do not paint your product.
- Do not paint, attempt to disassemble or modify your product. Only Sony Ericsson authorised personnel should perform service.
- Consult with authorised medical staff and the instructions of the medical device manufacturer before using your product near pacemakers or other medical devices or equipment.
- Discontinue use of electronic devices or disable the radio transmitting functionality of the device where required or requested to do so.
- Do not use where a potentially explosive atmosphere exists.
- Do not place your product or install wireless equipment in the area above an air bag in your car.



- Caution: Cracked or broken displays may create sharp edges or splinters that could be harmful upon contact.
- Do not use your Bluetooth Headset in positions where it is uncomfortable or will be subject to pressure.

### CHILDREN

Warning! Keep out of the reach of children. Do not allow children to play with phones or accessories. They could hurt themselves or others.



Products may contain small parts that could become detached and create a choking hazard.

### Power supply (Charger)

Connect the charger to power sources as marked on the product. Do not use outdoors or in damp areas. Do not alter or subject the cord to damage or stress. Unplug the unit before cleaning it. Never alter the plug. If it does not fit into the outlet, have a proper outlet installed by an electrician. When power supply is connected there is a small drain of power. To avoid this small energy waste, disconnect the power supply when the product is fully charged.

Use of charging devices that are not Sony Ericsson branded may impose increased safety risks.

### Battery

New or idle batteries can have short-term reduced capacity. Fully charge the battery before initial use. Charge the battery in temperatures between +5°C (+41°F) and +45°C (+113°F). Do not put the battery into your mouth. Do not let the battery contacts touch another metal object. Use for intended purpose only. Turn off the phone before removing the battery. Only Sony Ericsson service partners should remove or replace the battery of a Bluetooth handsfree. Performance depends on temperatures, signal strength, usage patterns, features selected

and voice or data transmissions. Avoid danger by using appropriate Sony Ericsson batteries and chargers.

## Personal medical devices

Phones may affect implanted medical equipment. Reduce risk of interference by keeping a minimum distance of 15 cm (6 inches) between the phone and the device. Use the phone at your right ear. Do not carry the phone in your breast pocket. Turn off the phone if you suspect interference. For all medical devices, consult a physician and the manufacturer.

## Driving

Some vehicle manufacturers forbid the use of phones in their vehicles unless a handsfree kit with an external antenna supports the installation. Check with your vehicle manufacturer's representative to be sure that your phone or Bluetooth handsfree will not affect the electronic systems in your vehicle. Full attention should be given to driving at all times and local laws and regulations restricting the use of wireless devices while driving must be observed.

## GPS/Location based functions

Some products provide GPS/Location based functions. Location determining functionality is provided "As is" and "With all faults". Sony Ericsson does not make any representation or warranty as to the accuracy of such location information.

Use of location-based information by the device may not be uninterrupted or error free and may additionally be dependent on network service availability. Please note that functionality may be reduced or prevented in certain environments such as building interiors or areas adjacent to buildings. Caution: Do not use GPS functionality in a manner which causes distraction from driving.

## Emergency calls

Calls cannot be guaranteed under all conditions. Never rely solely upon phones for essential communications. Calls may not be possible in all areas, on all networks, or when certain network services and/or phone features are used.

## Antenna

Use of antenna devices not marketed by Sony Ericsson could damage your phone, reduce performance, and produce SAR levels above the established limits. Do not cover the antenna with your hand as this affects call quality, power levels and can shorten talk and standby times.

## Radio frequency (RF) exposure and Specific Absorption Rate (SAR)

When your phone or Bluetooth handsfree is turned on, it emits low levels of radio frequency energy. International safety guidelines have been developed through periodic and thorough evaluation of scientific studies. These guidelines establish permitted levels of radio wave exposure. The guidelines include a safety margin designed to assure the safety of all persons and to account for any variations in measurements.

Specific Absorption Rate (SAR) is used to measure radio frequency energy absorbed by the body when using a phone. The SAR value is determined at the highest certified power level in laboratory conditions, but because the phone is designed to use the minimum power necessary to access the chosen network, the actual SAR level can be well below this value. There is no proof of difference in safety based on difference in SAR value.

Products with radio transmitters sold in the US must be certified by the Federal Communications Commission (FCC). When required, tests are performed when the phone is placed at the ear and when worn on the body. For body-worn operation, the phone has been tested when positioned at

minimum of 15 mm from the body without any metal parts in the vicinity of the phone or when properly used with an appropriate Sony Ericsson accessory and worn on the body.

For more information about SAR and radio frequency exposure go to:  
[www.sonyericsson.com/health](http://www.sonyericsson.com/health).

## Malware

Malware (short for malicious software) is software that can harm your phone or other computers. Malware or harmful applications can include viruses, worms, spyware, and other unwanted programmes. While your device does employ security measures to resist such efforts, Sony Ericsson does not warrant or represent that your device will be impervious to introduction of malware. You can however reduce the risk of malware attacks by using care when downloading content or accepting applications, refraining from opening or responding to messages from unknown sources, using trustworthy services to access the Internet, and only downloading content to your phone from known, reliable sources.

## Accessories

Use only Sony Ericsson branded original accessories and certified service partners. Sony Ericsson does not test third-party accessories. Accessories may influence RF Exposure, radio performance, sound loudness, electric safety and other areas. Third-party accessories and parts may pose a risk to your health or safety or decrease performance.

## Accessible Solutions/Special Needs

In the US, compatible Sony Ericsson phones may offer compatibility with TTY terminals (with use of necessary accessory). For more information call the Sony Ericsson Special Needs Center on 877 878 1996 (TTY) or 877 207 2056 (voice), or go to [www.sonyericsson-snc.com](http://www.sonyericsson-snc.com).

## Disposal of old electrical and electronic equipment

Electronic equipment and batteries should not be included as household waste but should be left at an appropriate collection point for recycling. This helps prevent potential negative consequences for the environment and human health. Check local regulations by contacting your local city office, your household waste disposal service, the shop where you purchased the product or calling a Sony Ericsson Call Center.



## Disposing of the battery

Check local regulations or call a Sony Ericsson Call Center for information. Never use municipal waste.



## Memory card

If your product comes complete with a removable memory card, it is generally compatible with the phone purchased but may not be compatible with other devices or the capabilities of their memory cards. Check other devices for compatibility before purchase or use. If your product is equipped with a memory card reader, check memory card compatibility before purchase or use.

Memory cards are generally formatted prior to shipping. To reformat the memory card, use a compatible device. Do not use the standard operating system format when formatting the memory card on a PC. For details, refer to the operating instructions of the device or contact customer support.

## WARNING:

If your device requires an adapter for insertion into the phone or another device, do not insert the card directly without the required adapter.

## Precautions on Memory Card Use

- Do not expose the memory card to moisture.
- Do not touch terminal connections with your hand or any metal object.
- Do not strike, bend, or drop the memory card.
- Do not attempt to disassemble or modify the memory card.
- Do not use or store the memory card in humid or corrosive locations or in excessive heat such as a closed car in summer, in direct sunlight or near a heater, etc.
- Do not press or bend the end of the memory card adapter with excessive force.
- Do not let dirt, dust, or foreign objects get into the insert port of any memory card adapter.
- Check you have inserted the memory card correctly.
- Insert the memory card as far as it will go into any memory card adapter needed. The memory card may not operate properly unless fully inserted.
- We recommend that you make a backup copy of important data. We are not responsible for any loss or damage to content you store on the memory card.
- Recorded data may be damaged or lost when you remove the memory card or memory card adapter, turn off the power while formatting, reading or writing data, or use the memory card in locations subject to static electricity or high electrical field emissions.

## Protection of personal information

Erase personal data before disposing of the product. To delete data, perform a master reset. Deleting data from the phone memory does not ensure that it cannot be recovered. Sony Ericsson does not warrant against recovery of information and does not assume responsibility for disclosure of any information even after a master reset.

## LOUDNESS WARNING:

Avoid volume levels that may be harmful to your hearing.

## End User Licence Agreement

This wireless device, including without limitation any media delivered with the device, ("Device") contains software owned by Sony Ericsson Mobile Communications AB and its affiliated companies ("Sony Ericsson") and its third party suppliers and licensors ("Software").

As user of this Device, Sony Ericsson grants you a non-exclusive, non-transferable, non-assignable licence to use the Software solely in conjunction with the Device on which it is installed and/or delivered with. Nothing herein shall be construed as a sale of the Software to a user of this Device. You shall not reproduce, modify, distribute, reverse engineer, decompile, otherwise alter or use any other means to discover the source code of the Software or any component of the Software. For avoidance of doubt, you are at all times entitled to transfer all rights and obligations to the Software to a third party, solely together with the Device with which you received the Software, provided always that such third party agrees in writing to be bound by these rules.

You are granted this licence for a term of the useful life of this Device. You can terminate this licence by transferring all your rights to the Device on which you have received the Software to a third party in writing. If you fail to comply with any of the terms and conditions set out in this licence, it will terminate with immediate effect.

Sony Ericsson and its third party suppliers and licensors are the sole and exclusive owner of and retain all rights, title and interest in and to the Software. Sony Ericsson, and, to the extent that the Software contains material or code of a third party, such third party, shall be entitled third party beneficiaries of these terms.



The validity, construction and performance of this licence shall be governed by the laws of Sweden. The foregoing shall apply to the full extent permitted by, when applicable, statutory consumer rights.

## Limited Warranty

Sony Ericsson Mobile Communications AB, SE-221 88 Lund, Sweden, (Sony Ericsson) or its local affiliated company, provides this Limited Warranty for your mobile phone, original accessory delivered with your mobile phone, and/or your mobile computing product (hereinafter referred to as "Product").

Should your Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Sony Ericsson Call Center (national rates may apply) or visit [www.sonyericsson.com](http://www.sonyericsson.com) for further information.

### Our warranty

Subject to the conditions of this Limited Warranty, Sony Ericsson warrants this Product to be free from defects in design, material and workmanship at the time of its original purchase by a consumer. This Limited Warranty will last for a period of two (2) years as from the original date of purchase of the Product for your mobile phone, and for a period of one (1) year following the original purchase date of the Product for all original accessories (such as the battery, charger or handsfree kit) which may be delivered with your mobile phone.

### What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to defects in design, materials or workmanship, Sony Ericsson authorized distributors or service partners, in the country/region\* where you purchased the Product, will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Sony Ericsson and its service partners reserve the right to charge a handling fee if a returned Product is found not to be under warranty according to the conditions below.

Please note that some of your personal settings, downloads and other information may be lost when your Sony Ericsson Product is repaired or replaced. At present Sony Ericsson may be prevented by applicable law, other regulations or technical restrictions from making a backup copy of certain downloads. Sony Ericsson does not take any responsibility for any lost information of any kind and will not reimburse you for any such loss. You should always make backup copies of all the information stored on your Sony Ericsson Product such as downloads, calendar and contacts before handing in your Sony Ericsson Product for repair or replacement.

### Conditions

- 1 This Limited Warranty is valid only if the original proof of purchase for this Product issued by a Sony Ericsson authorized dealer specifying the date of purchase and serial number\*\*, is presented with the Product to be repaired or replaced. Sony Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
- 2 If Sony Ericsson repairs or replaces the Product, the repair for the defect concerned, or the replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced parts or components will become the property of Sony Ericsson.
- 3 This warranty does not cover any failure of the Product due to normal tear and wear, or due to misuse, including but not limited to use in other than the normal and customary manner, in

accordance with the Sony Ericsson instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, software or hardware modification or adjustment, acts of God or damage resulting from liquid.

A rechargeable battery can be charged and discharged more than a hundred times. However, it will eventually wear out – this is not a defect and corresponds to normal wear and tear. When the talk time or standby time is noticeably shorter, it is time to replace your battery. Sony Ericsson recommends that you use only batteries and chargers approved by Sony Ericsson.

Minor variations in display brightness and color may occur between the phones. There may be small, bright or dark dots on the display. These are called defective pixels and occur when individual dots have malfunctioned and cannot be adjusted. Two defective pixels are deemed acceptable.

Minor variations in camera image appearance may occur between phones. This is not uncommon and is not regarded as a defective camera module.

- 4 Since the cellular system on which the Product is to operate is provided by a carrier independent from Sony Ericsson, Sony Ericsson will not be responsible for the operation, availability, coverage, services or range of that system.
- 5 This warranty does not cover Product failures caused by installations, modifications, or repair or opening of the Product performed by a non-Sony Ericsson authorised person.
- 6 The warranty does not cover Product failures which have been caused by use of accessories or other peripheral devices which are not Sony Ericsson branded original accessories intended for use with the Product.

Sony Ericsson disclaims any and all warranties, whether express or implied, for failures caused to the Product or peripheral devices as a result of viruses, trojans horses, spyware, or other

malicious software. Sony Ericsson strongly recommends that you install appropriate virus protection software on your Product and any peripheral devices connected to it, as available, and update it regularly, to better protect your device. It is understood, however, that such software will never fully protect your Product or its peripheral devices and Sony Ericsson disclaims all warranties, whether express or implied, in case of failure by such antivirus software to fulfill its intended purpose.

- 7 Tampering with any of the seals on the Product will void the warranty.
- 8 THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SONY ERICSSON OR ITS LICENSORS BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS; TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under applicable legislation in force, nor the consumer's rights against the dealer arising from their sales/purchase contract.

## \* GEOGRAPHICAL SCOPE OF THE WARRANTY

If you have purchased your Product in a country member of the European Economic Area (EEA) or in Switzerland or the Republic of Turkey, and such Product was intended for sale in the EEA or in Switzerland or in Turkey, you can have your Product serviced in any EEA country or in Switzerland or in Turkey, under the warranty conditions prevailing in the country in which you require servicing of the Product, provided that an identical Product is sold in such country by an authorised Sony Ericsson distributor. To find out if your Product is sold in the country you are in, please call the local Sony Ericsson Call Center. Please observe that certain services may not be possible elsewhere than in the country of original purchase due, for example, to the fact that your Product may have an interior or exterior which is different from equivalent models sold in other countries. In addition, please note that it may sometimes not be possible to repair SIM-locked Products.

\*\* In some countries/regions additional information (such as a valid warranty card) may be requested.

## FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.



## Declaration of Conformity for W760i

We, Sony Ericsson Mobile Communications AB of Nya Vattentornet

SE-221 88 Lund, Sweden

declare under our sole responsibility that our product

**Sony Ericsson type AAD-3252041-BV**

and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 301 908-1:V2.2.1, EN 301 908-2:V2.2.1, EN 300 328:V1.7.1, EN 300 440-1:V1.7.1, EN300 440-2:V1.1.2, EN 301 489-3:V1.4.1, EN 301 489-7:V1.3.1, EN301 489-17:V1.2.1, EN 301 489-24:V1.3.1, EN 60 950-1:2006 following the provisions of, Radio Equipment and Telecommunication Terminal Equipment directive 1999/5/EC.

Lund, December 2007

CE 0682

A handwritten signature in black ink, reading 'Shoji Nemoto', written over a horizontal line.

Shoji Nemoto,

Head of Product Business Group GSM/UMTS

We fulfil the requirements of the R&TTE Directive (1999/5/EC).

# Index

## A

activity menu .....	14
alarms .....	56
answering service .....	26
applications .....	47
appointments .....	57
assembly .....	5
audio book .....	19

## B

battery	
charging .....	8
inserting .....	5
use and care .....	67
Bluetooth™ visibility .....	49
Bluetooth™ wireless technology .....	49
bookmarks	
creating .....	40
select .....	40

## C

calendar .....	57
call diverting .....	27
call list .....	25
call numbers in message .....	31
call time .....	29
caller-specific ringtones .....	23

## calls

answering and rejecting .....	21
handling two calls .....	28
international .....	21
making and receiving .....	21
putting on hold .....	27
recording .....	47

camera .....	36–37
--------------	-------

code memo .....	63
-----------------	----

conference calls .....	28
------------------------	----

## contacts

adding phone contacts .....	22
default contacts .....	22
groups .....	25
synchronising .....	51

## D

date .....	59
downloading music .....	20

## E

email .....	32
emergency numbers .....	22
entering text .....	15

## F

file manager .....	55
flight mode .....	55

<b>G</b>		<b>L</b>	
games .....	47	language .....	15
Google Maps™ .....	43	location services .....	42
GPS .....	42	lock	
groups .....	25	keypad .....	61
		phone .....	60
<b>H</b>		<b>M</b>	
handsfree .....	17, 26	master reset .....	61
Bluetooth™ technology .....	50	Media Manager .....	16
help .....	7	media transfer .....	17, 51
hiding number .....	29	memory card .....	14
history		memory status .....	24
Web pages .....	40	menu overview .....	11
		menus .....	13
<b>I</b>		messages	
IMEI number .....	61	area and cell information .....	35
Internet		email .....	32
bookmarks .....	40	picture .....	31
security and certificates .....	41	text .....	30
settings .....	48	voice .....	32
<b>J</b>		microphone .....	21
Java™ .....	47	MMS See picture messages	
<b>K</b>		MusicDJ™ .....	47
keypad lock .....	61	My friends .....	34
automatic .....	61	my numbers .....	28
keys .....	9		

<b>N</b>		podcasts .....	42
navigating menus .....	13	profiles .....	58
notes .....	58	PUK .....	7, 59, 60
adding .....	58	push email .....	34
showing in standby .....	58		
<b>P</b>		<b>R</b>	
pan and zoom		restricted dialling .....	29
Web pages .....	40	ringtones .....	46
PC Suite		RSS feeds See Web feeds .....	41
synchronising .....	52		
phone mode .....	52	<b>S</b>	
phone name .....	48	safety guidelines .....	67
photo feeds .....	42	search	
photo fix .....	37	on Web pages .....	41
photo tags .....	38	selection keys .....	13
PhotoDJ™ .....	39	SensMe™ .....	19
photos		settings	
improving .....	37	Internet .....	48
photo fix .....	37	Java™ .....	48
picture messages .....	31	shake control .....	17
pictures .....	38	shortcuts .....	13
editing .....	39	SIM card .....	59
improving .....	37	copying to/from .....	23
photo fix .....	37	locking .....	59
PIN code		unblocking .....	60
changing .....	60	SMS See text messages	
unblocking .....	7	sound recorder .....	47
playlists .....	18	speed dial .....	25
PlayNow™ .....	20	standby .....	7
		notes .....	58

start-up screen .....	7
submenus .....	13
synchronising .....	51

## T

T9™ Text Input .....	15
tasks .....	58
text messages .....	30
theme .....	59
time .....	59
time zone .....	59
Tracker .....	44
training .....	44
transfer method	
Bluetooth™ technology .....	49
USB .....	50
transferring	
camera pictures .....	37
files .....	50
music .....	17
sound .....	50
turning on/off	
Bluetooth™ function .....	49
keypad lock .....	61
phone lock .....	60
SIM lock protection .....	60

## U

Update service .....	54
----------------------	----

## V

video	
blog .....	38
editing .....	39
video player .....	46
video recorder .....	36
VideoDJ™ .....	39
voice answering .....	26
voice commands .....	26
voice control .....	26
voice dialling .....	26
voice messages .....	32
voicemail .....	26
volume	
ear speaker .....	21
ringtone .....	46
volume control .....	18

## W

Walkman® player .....	17
warranty .....	71
Web	
search .....	41
Web feeds .....	41
update .....	41
Web pages	
history .....	40
pan and zoom .....	40

## Z

zoom .....	36
------------	----